

XF+BR SYSTEM

XF 200 SERIES,
DRAINAGE LAYER


XF 300 SERIES,
SEDUM MAT

XF 4130
MOISTURE RETENTION LAYER

XF 100 SERIES, ROOT BARRIER

ROOFING SYSTEM

XF 604, EDGING RESTRAINT
AGGREGATE

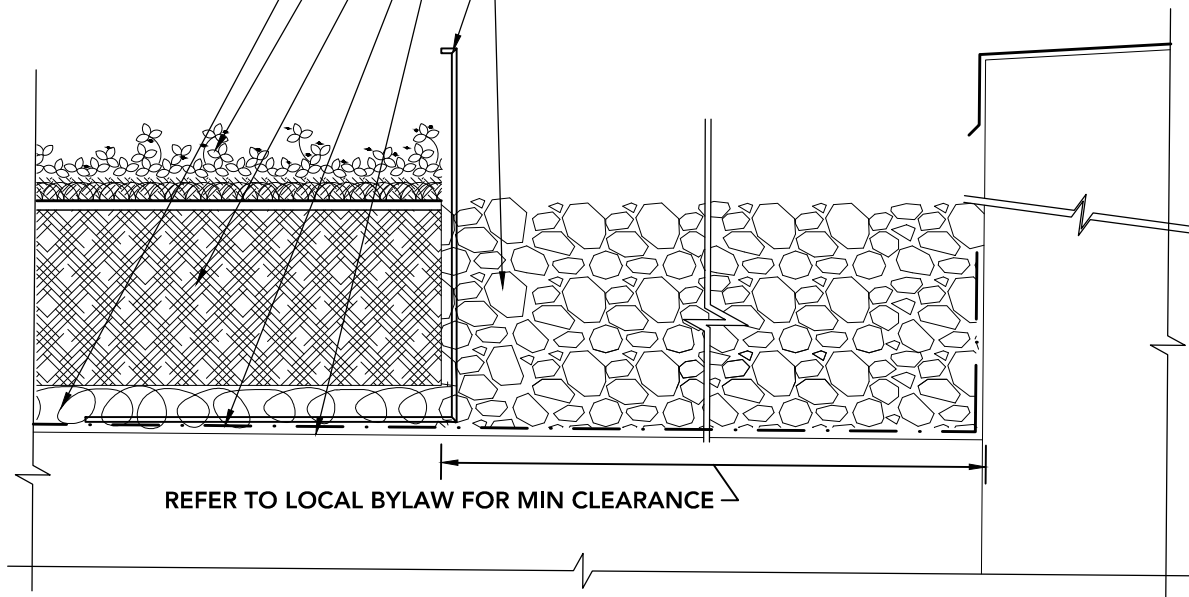

REFER TO LOCAL BYLAW FOR MIN CLEARANCE

NOTE:

1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

Xeroflor NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM

Detail at Roof Parapet



SCALE 1:2

©2020

XF+BR SYSTEM

XF 300 SERIES,
SEDUM MAT


XF 4130
MOISTURE RETENTION LAYER

XF 100 SERIES, ROOT BARRIER

ROOFING SYSTEM

XF 200 SERIES,
DRAINAGE LAYER

XF 604, EDGING RESTRAINT

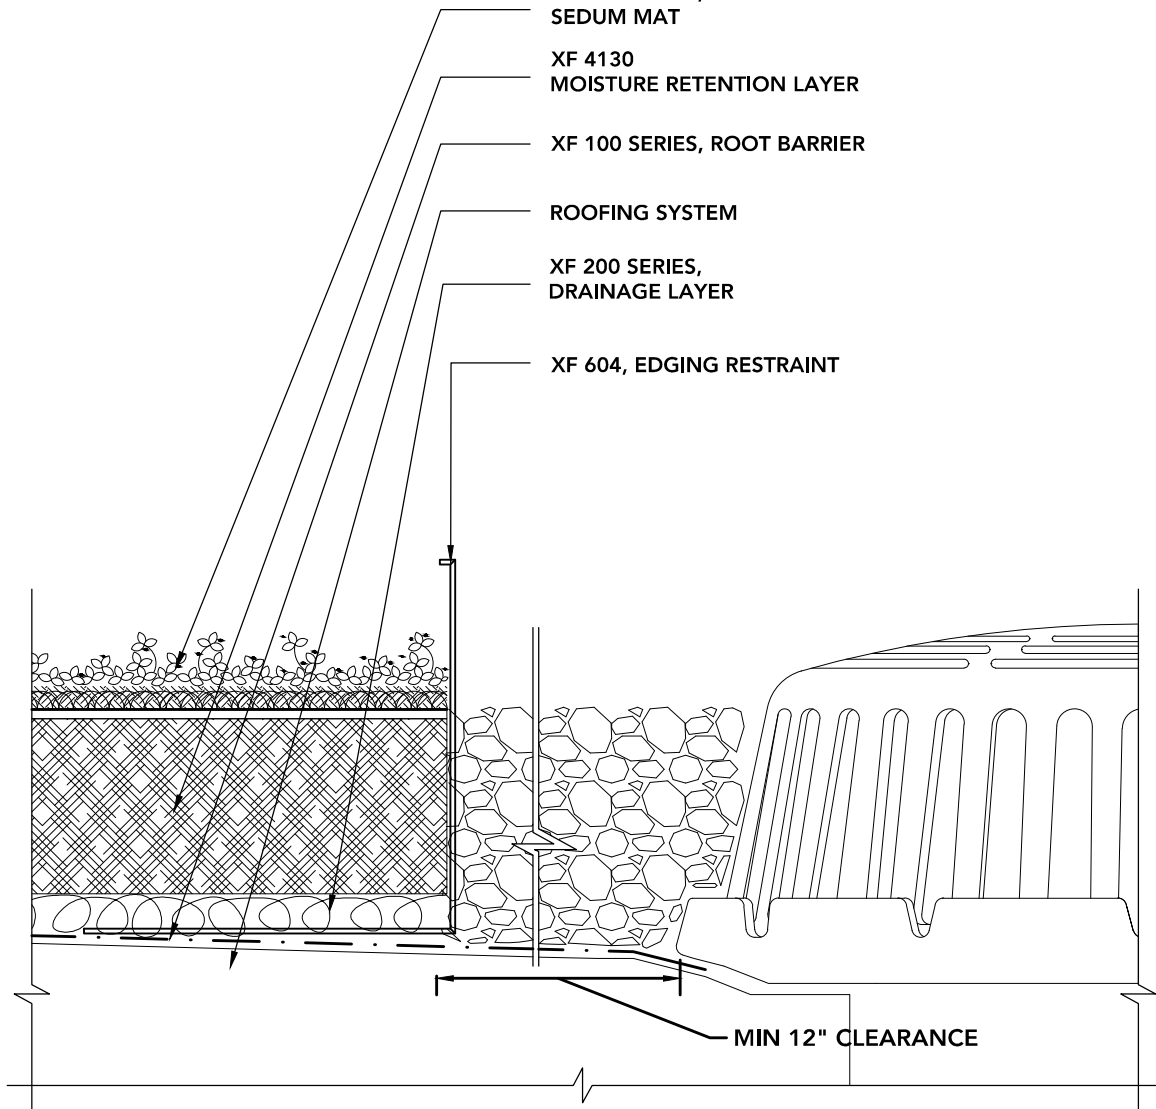

NOTE:


1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

Xeroflor NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM

Detail at Roof Drain



SCALE 1:2

©2020

XF+BR SYSTEM


**XF 200 SERIES,
DRAINAGE LAYER**

**XF 300 SERIES,
SEDUM MAT**

**XF 4130
MOISTURE RETENTION LAYER**

**XF 100 SERIES, ROOT BARRIER
ROOFING SYSTEM**

**XF 604, EDGING RESTRAINT
AGGREGATE**

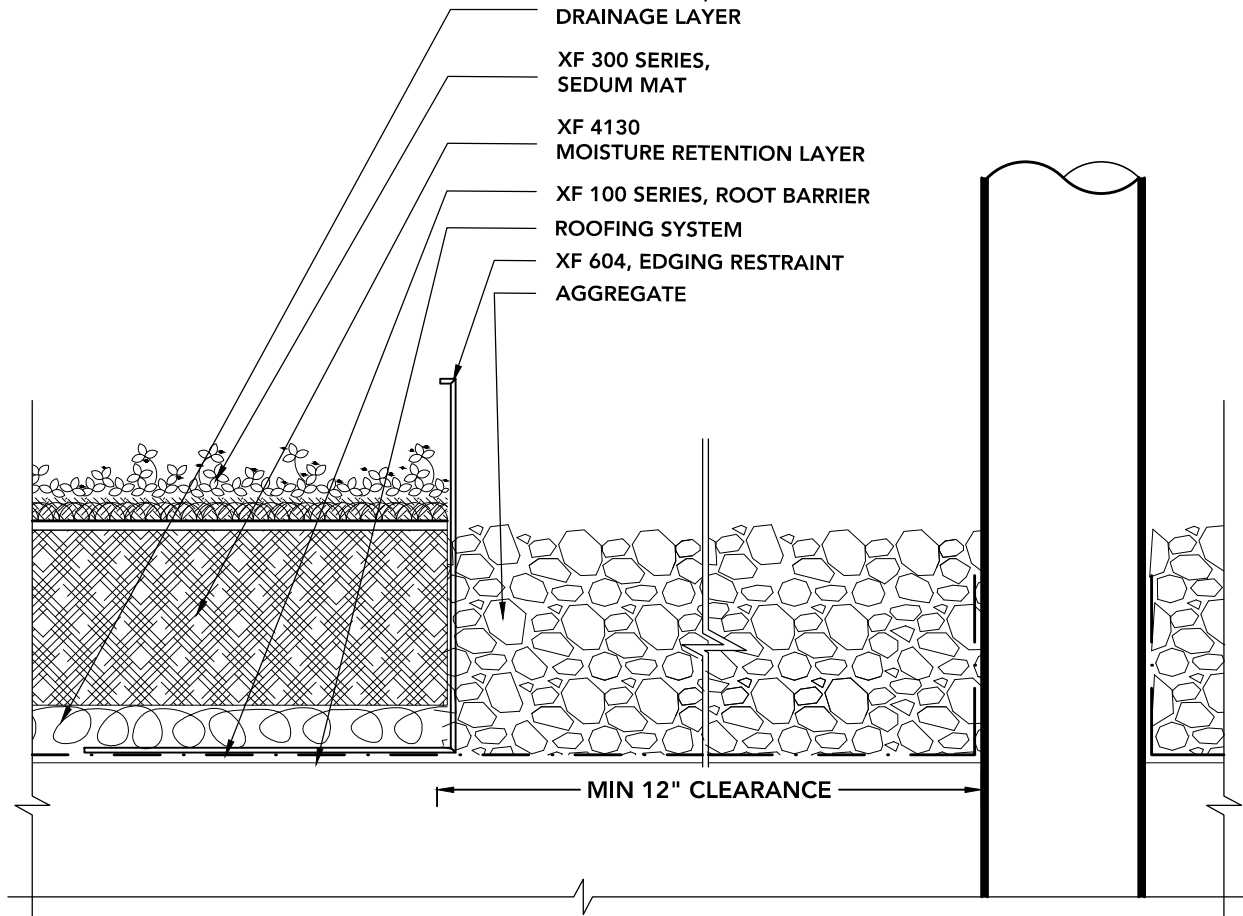

NOTE:
1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

Xeroflor NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151


XF+BR SYSTEM

Detail at Roof Penetration




SCALE 1:2

©2020

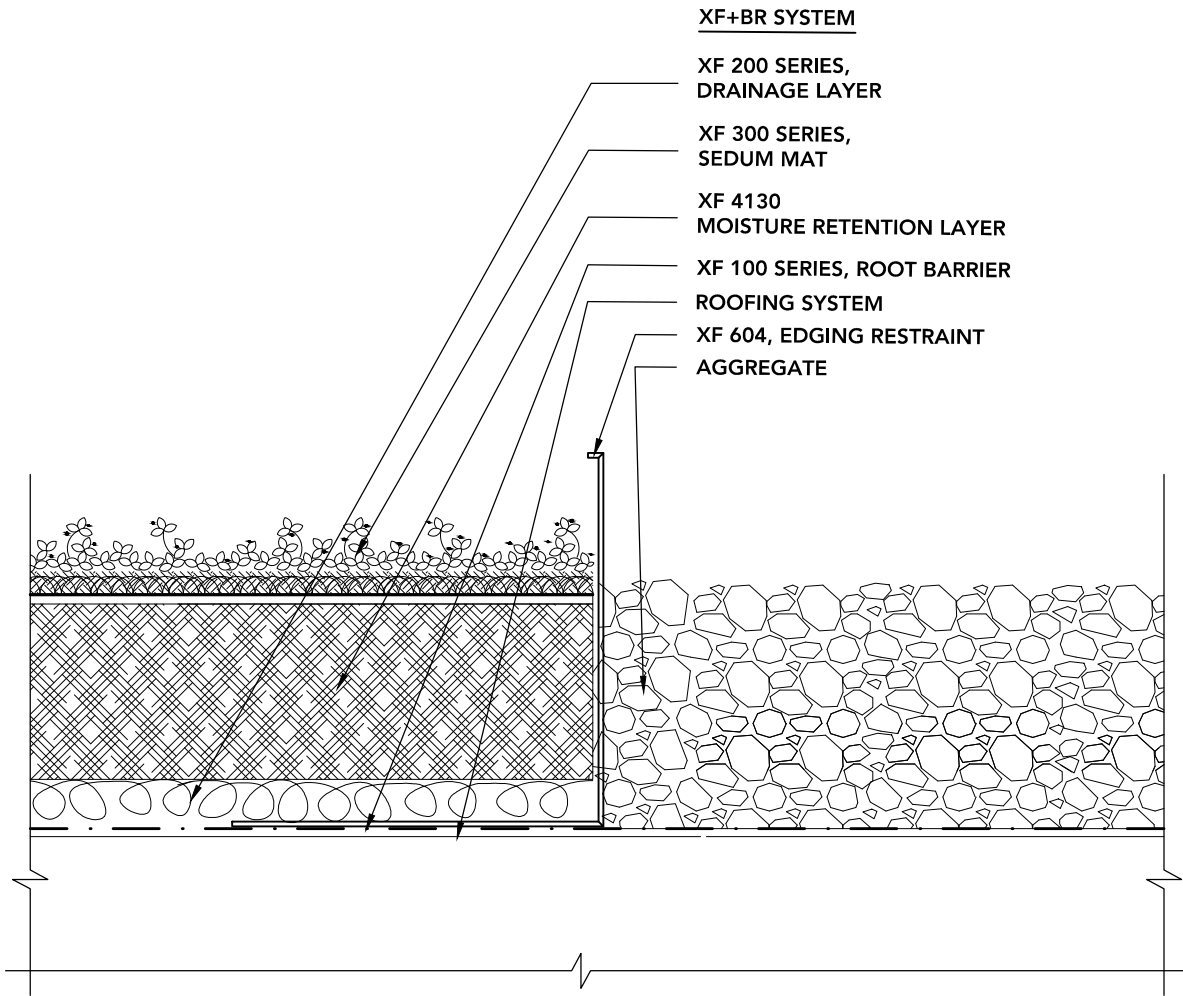

NOTE:
1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

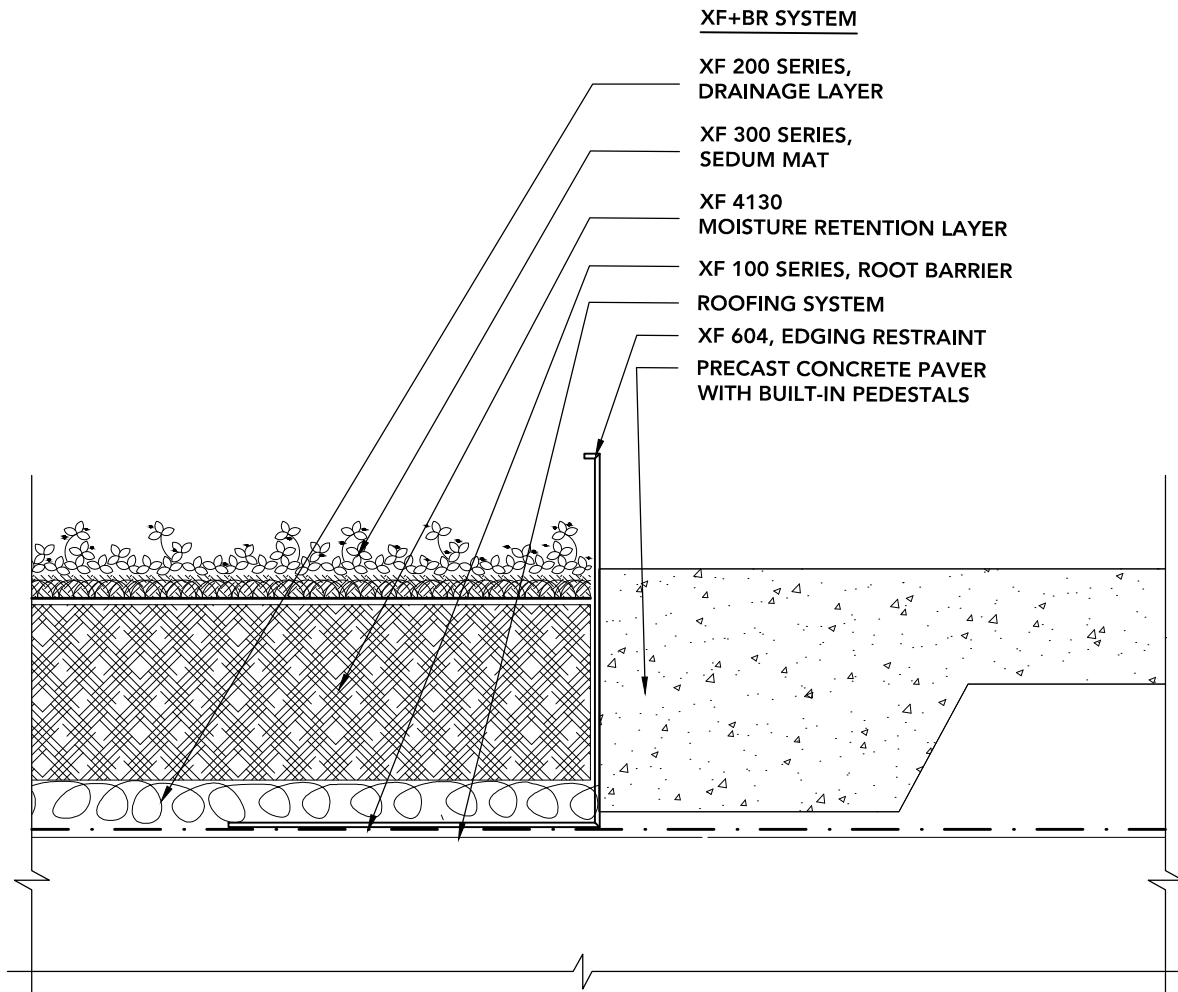

NOTE:
1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

Xeroflor NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM


Detail at Vegetation Free Zone



SCALE 1:2

©2020

XF+BR SYSTEM

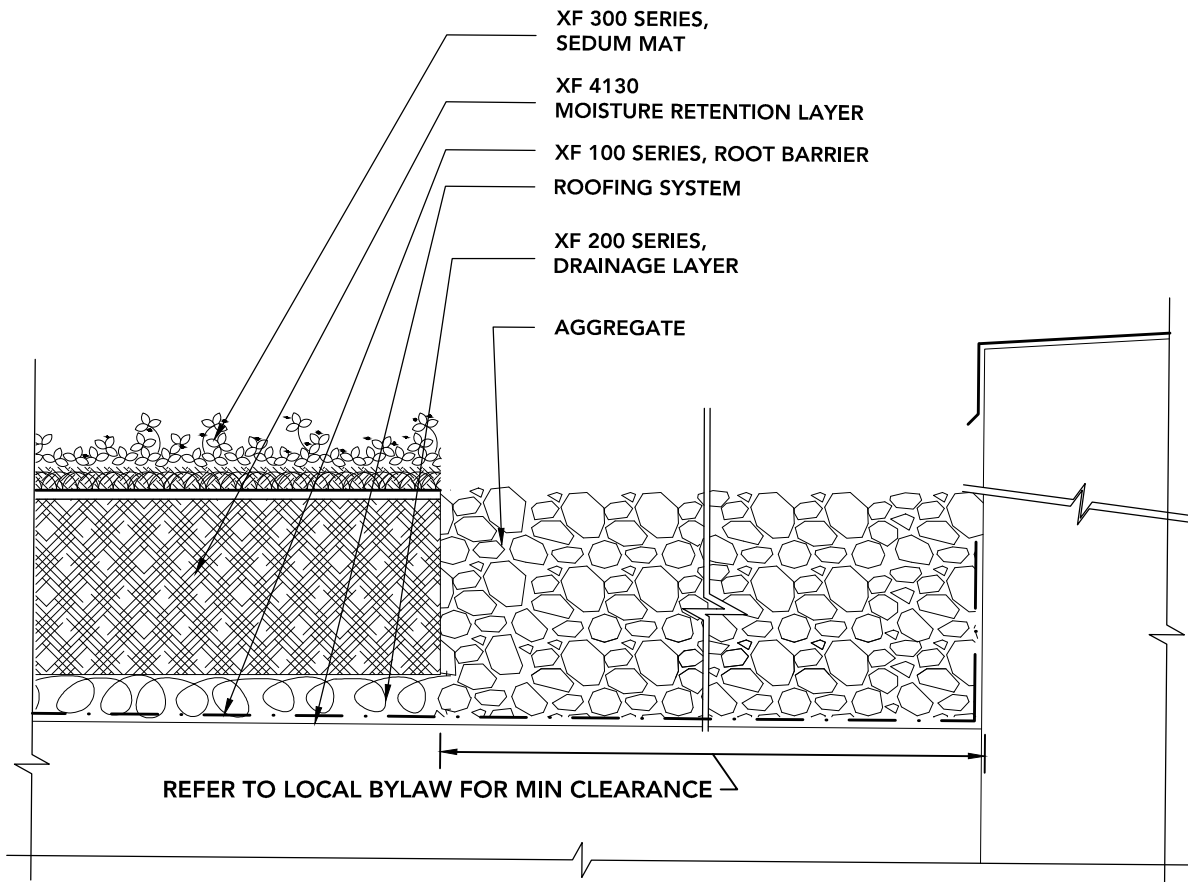

NOTE:

1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

Xeroflor NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM

Detail at Roof Parapet



SCALE 1:2

©2020

XF+BR SYSTEM


**XF 300 SERIES,
SEDUM MAT**

**XF 4130
MOISTURE RETENTION LAYER**

**XF 100 SERIES, ROOT BARRIER
ROOFING SYSTEM**

**XF 200 SERIES,
DRAINAGE LAYER**

AGGREGATE

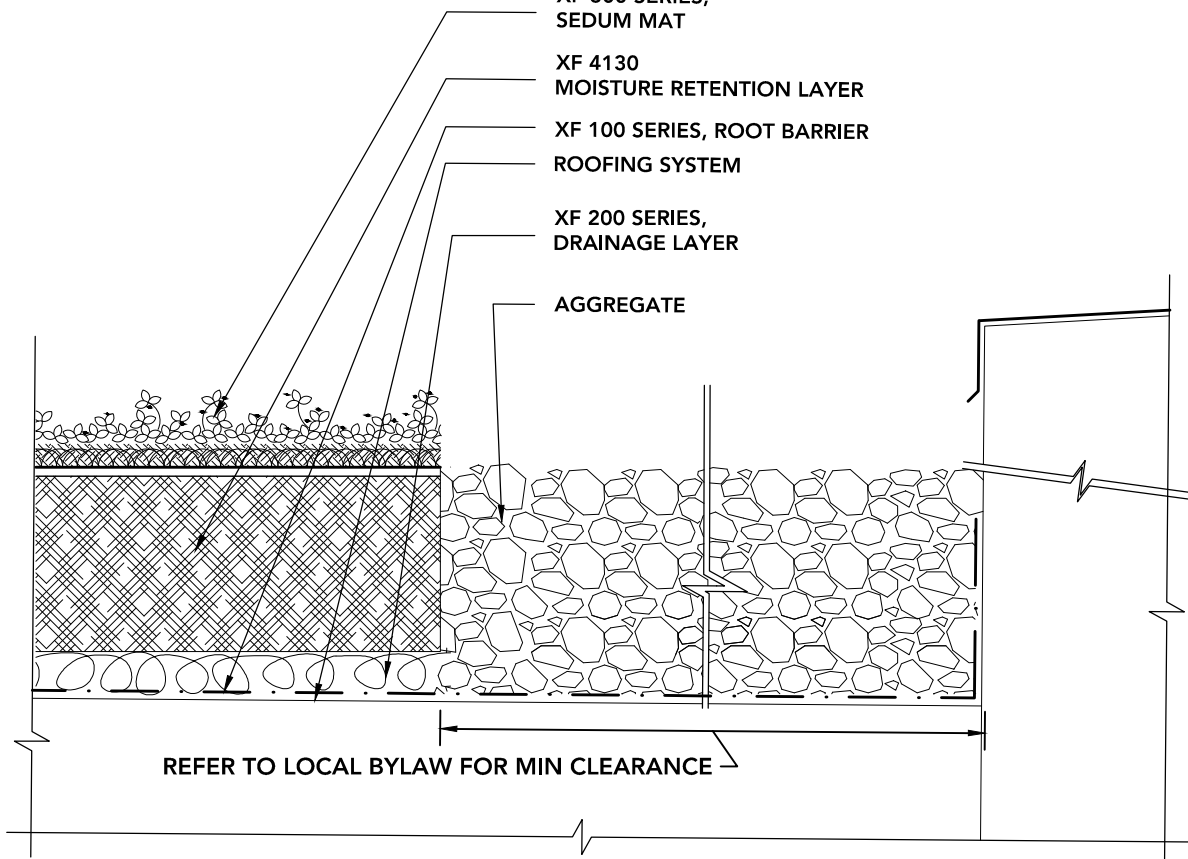

NOTE:

1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

Xeroflor NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM

Detail at Roof Parapet



SCALE 1:2

©2020

XF+BR SYSTEM


XF 300 SERIES,
SEDUM MAT

XF 4130
MOISTURE RETENTION LAYER

XF 100 SERIES, ROOT BARRIER

ROOFING SYSTEM

XF 200 SERIES,
DRAINAGE LAYER

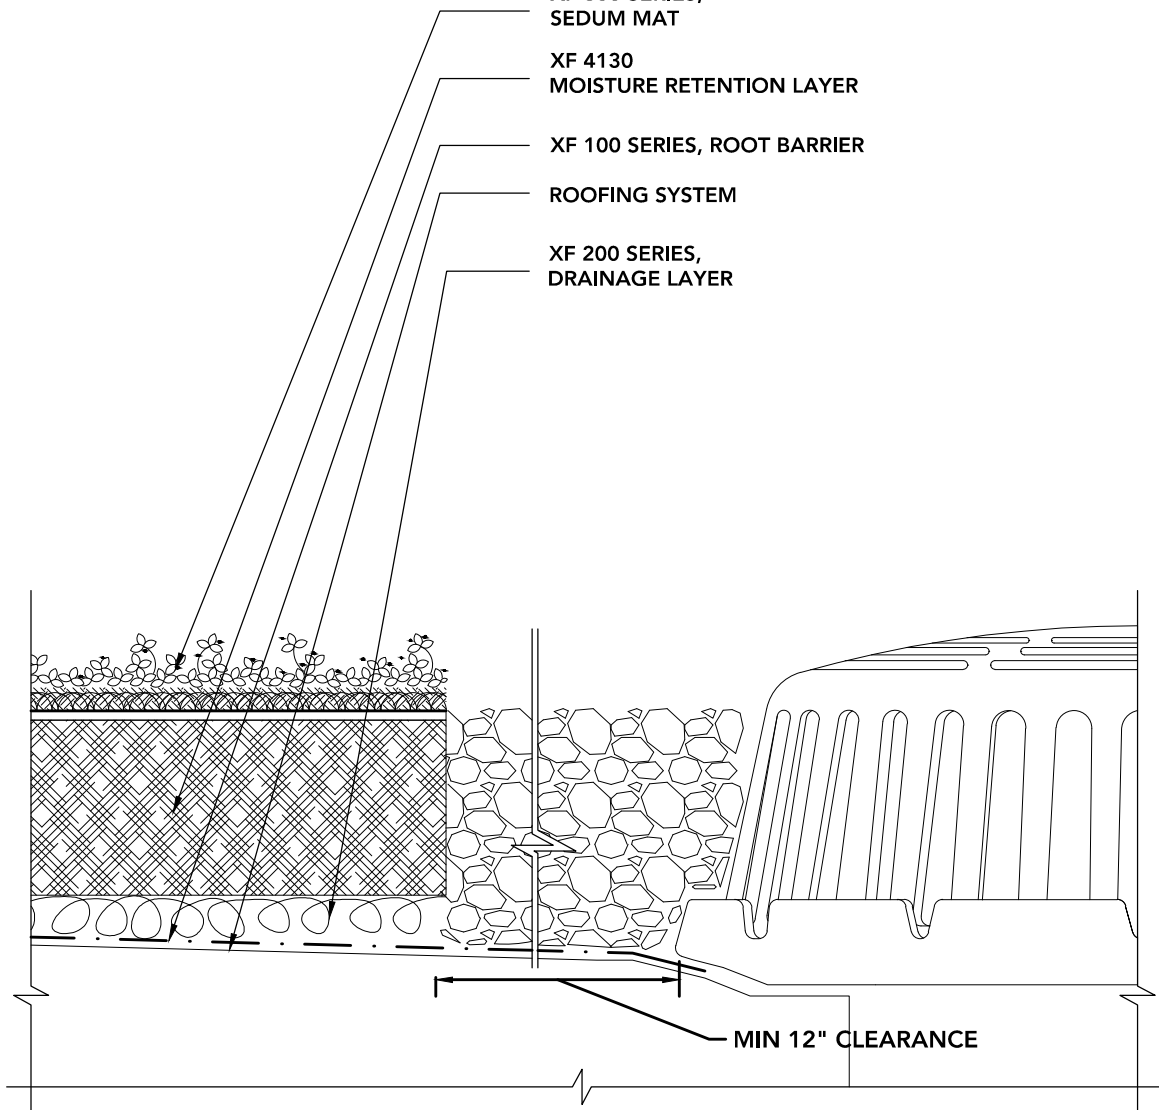

NOTE:

1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

Xeroflor NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM

Detail at Roof Drain



SCALE 1:2

©2020

XF+BR SYSTEM

XF 200 SERIES,
DRAINAGE LAYER


XF 300 SERIES,
SEDUM MAT

XF 4130
MOISTURE RETENTION LAYER

XF 100 SERIES, ROOT BARRIER

ROOFING SYSTEM

XF 704,
DRAIN INSPECTION CHAMBER (OPTIONAL)
CENTERED OVER ROOF DRAIN

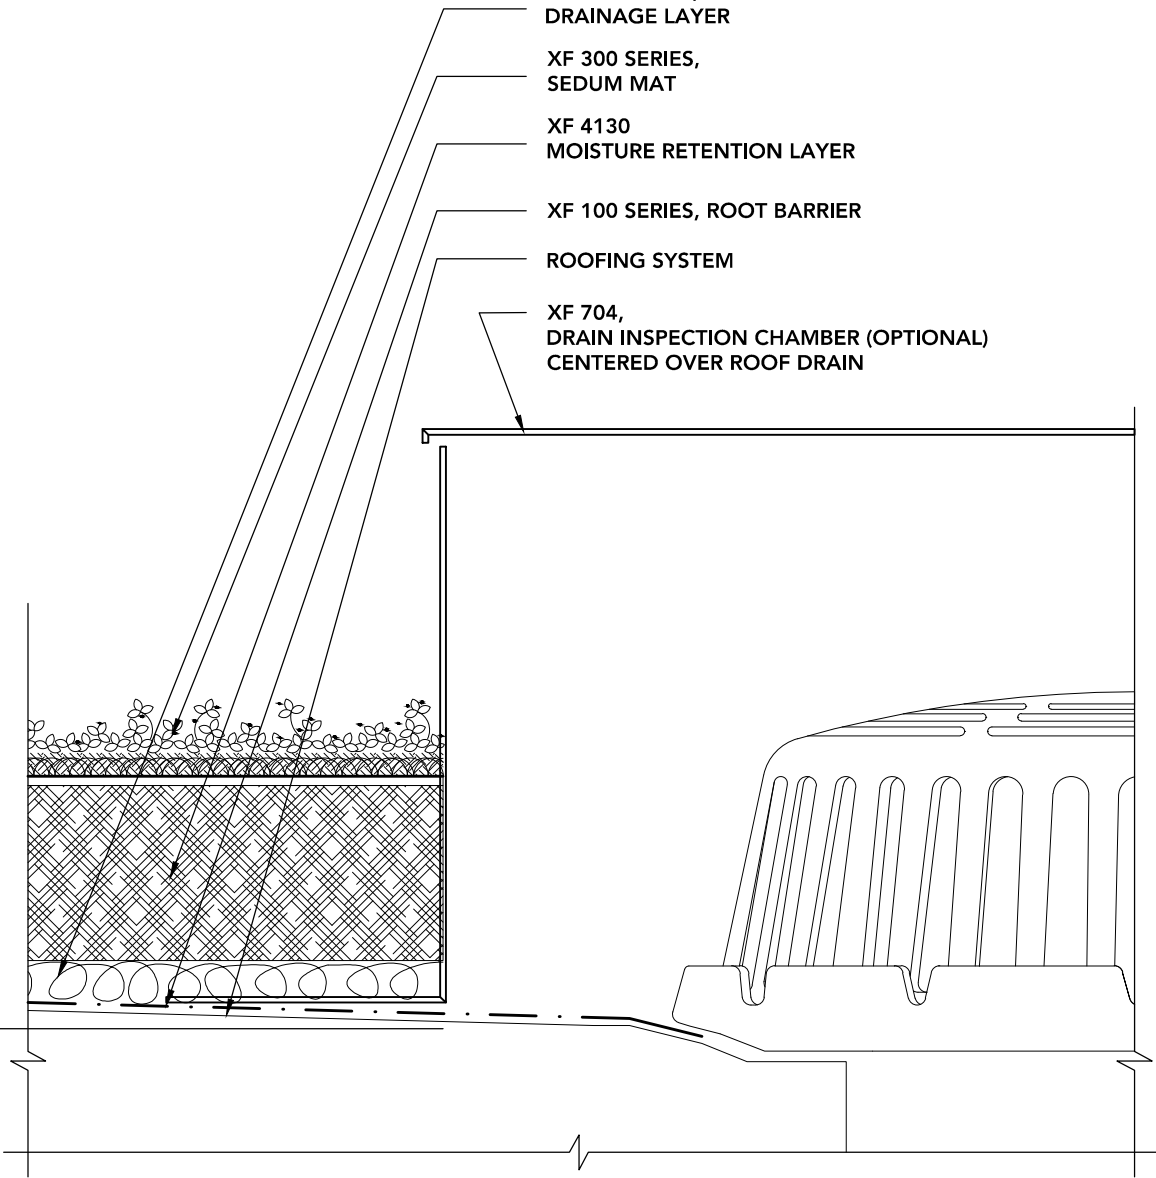

NOTE:

1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

XeroFlor NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM


Detail at Roof Drain



SCALE 1:2

©2020

XF+BR SYSTEM

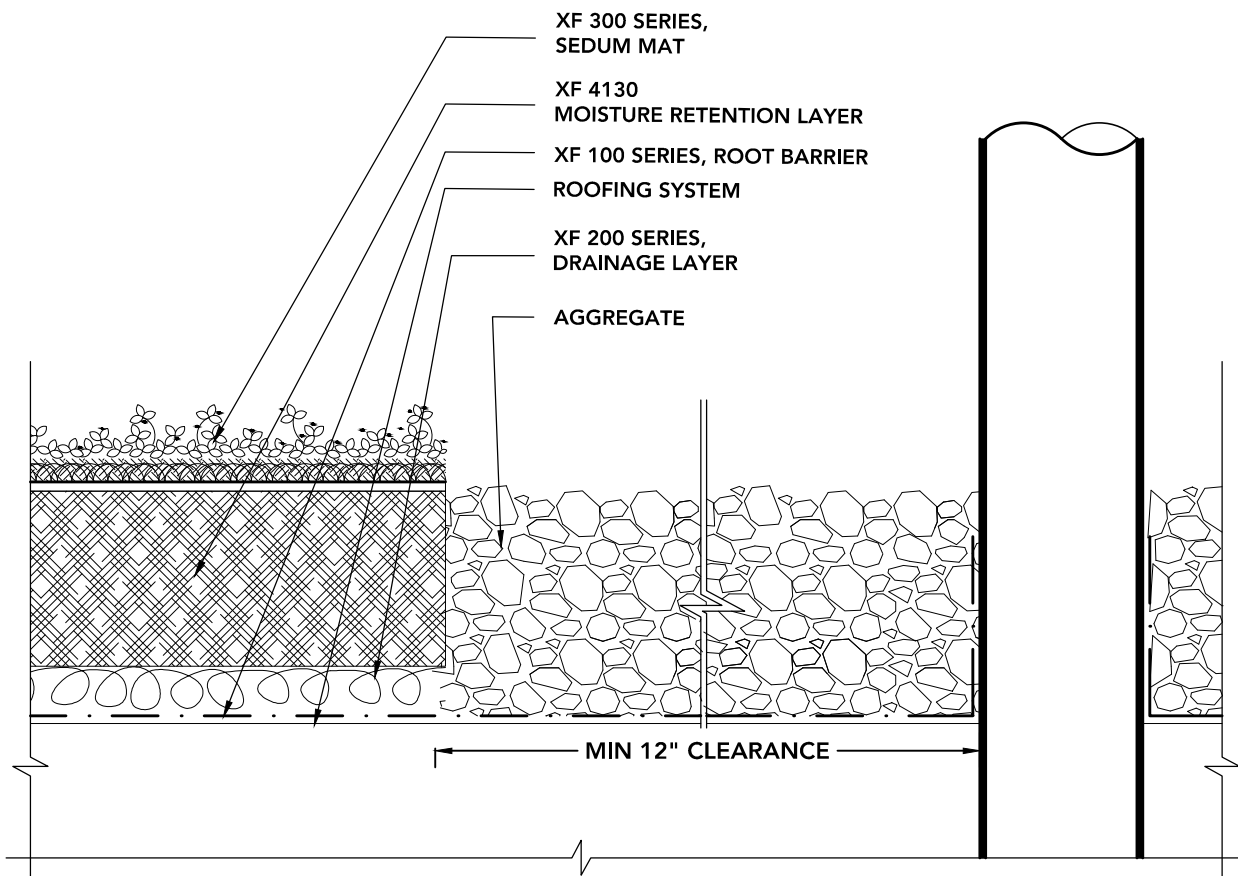

NOTE:

1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151


XF+BR SYSTEM

Detail at Roof Penetration




SCALE 1:2

©2020

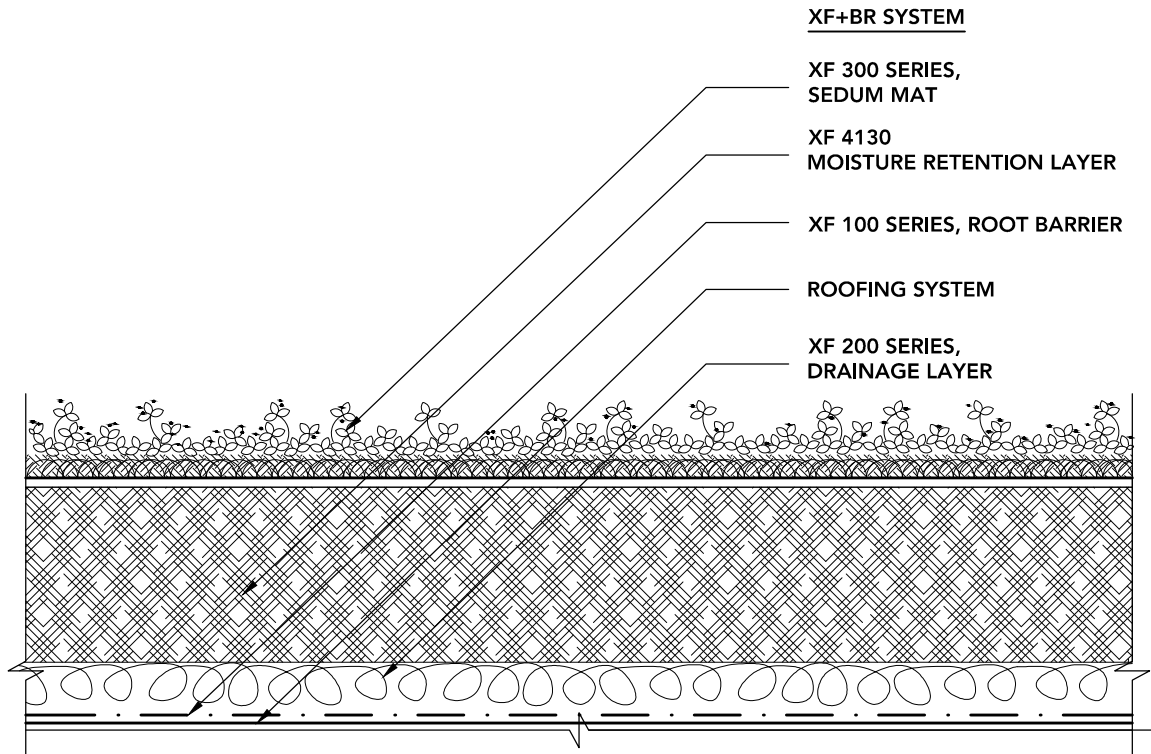

NOTE:
 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

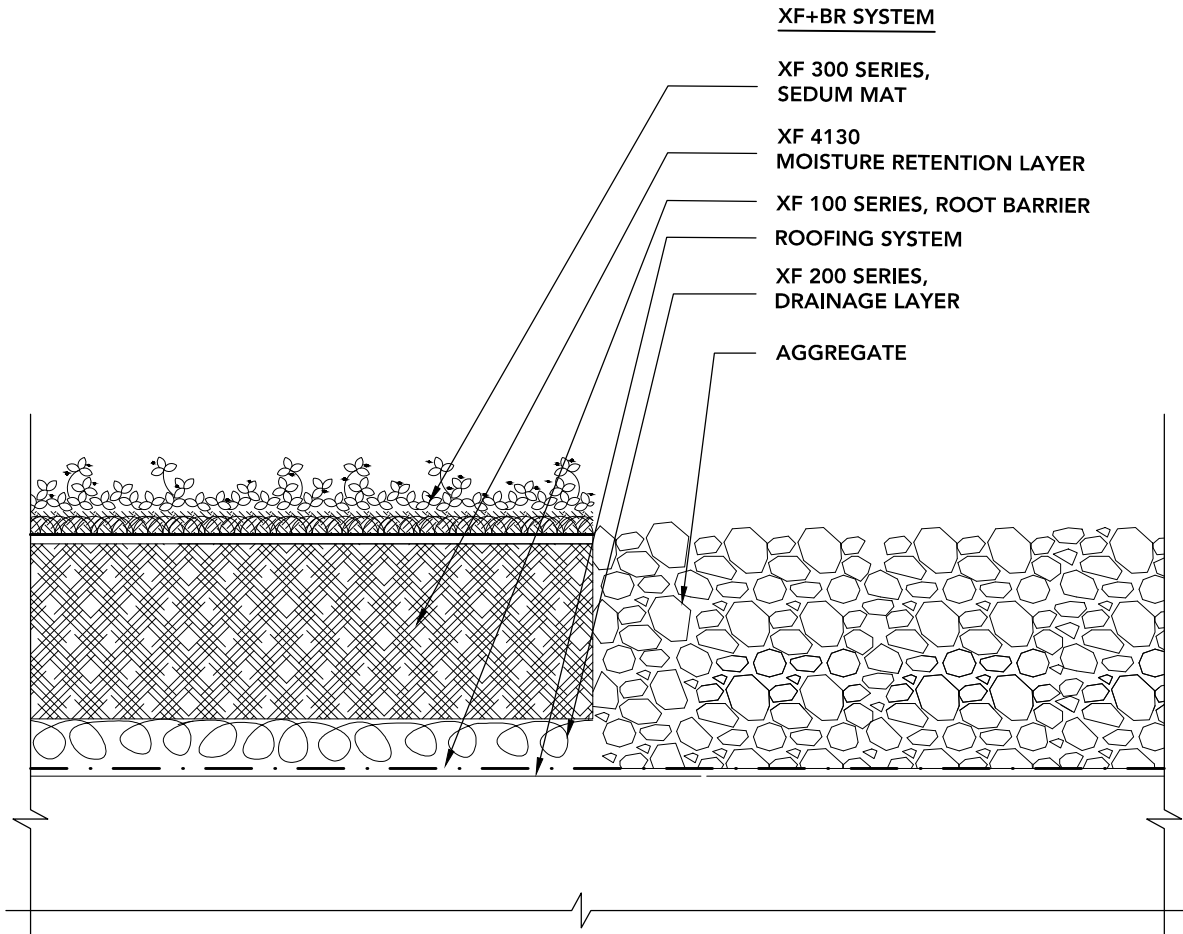

NOTE:
 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

Xeroflor NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM
 TOLL FREE: 1-866-335-1151


XF+BR SYSTEM

Detail at Vegetation Free Zone



SCALE 1:2

©2020

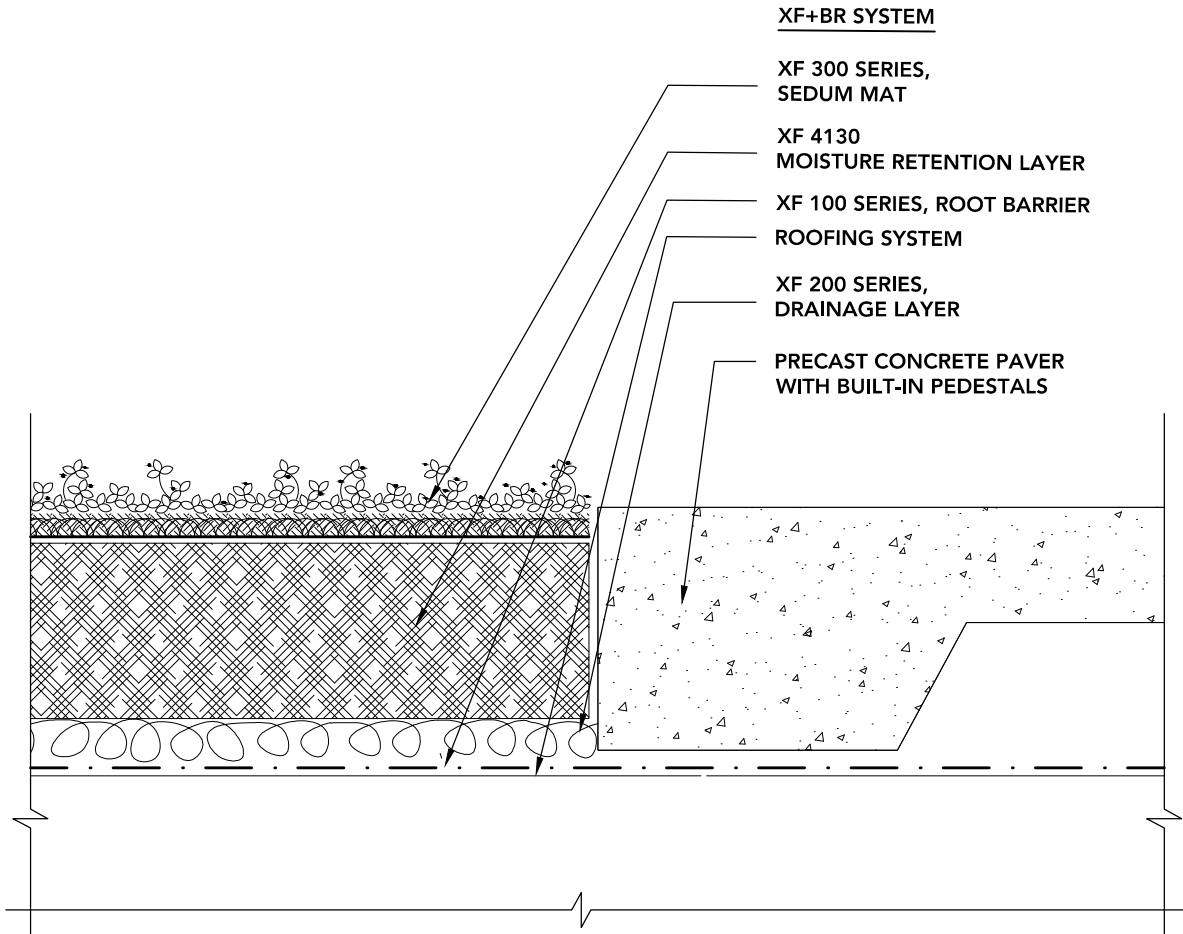


Xeroflor NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151


XF+BR SYSTEM

Detail at Vegetation Free Zone



SCALE 1:2

©2020

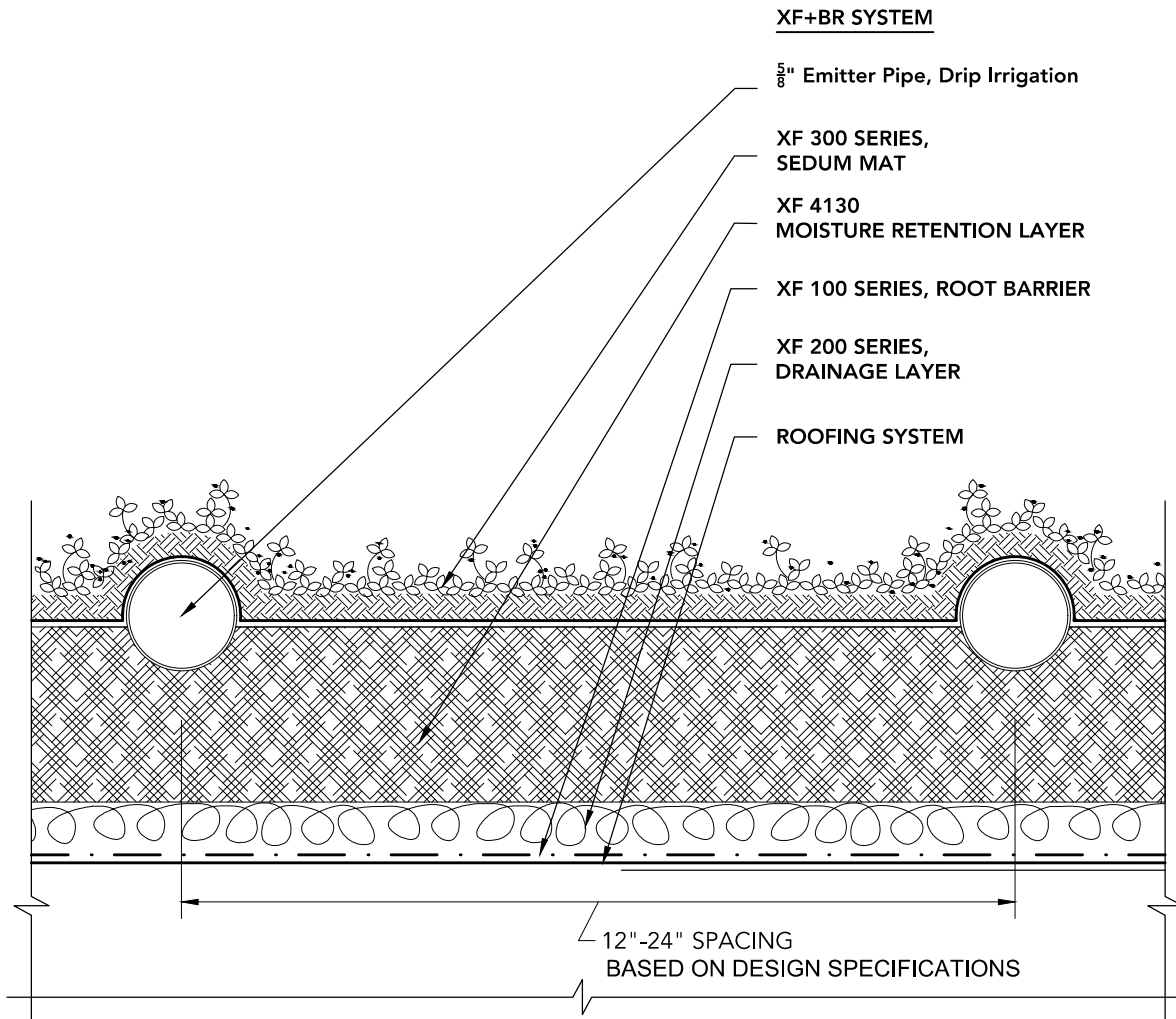


NOTE:
 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

Xeroflor NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM
 TOLL FREE: 1-866-335-1151

XF+BR SYSTEM


Integrated with Irrigation System



SCALE 1:2

©2020

XF+BR SYSTEM

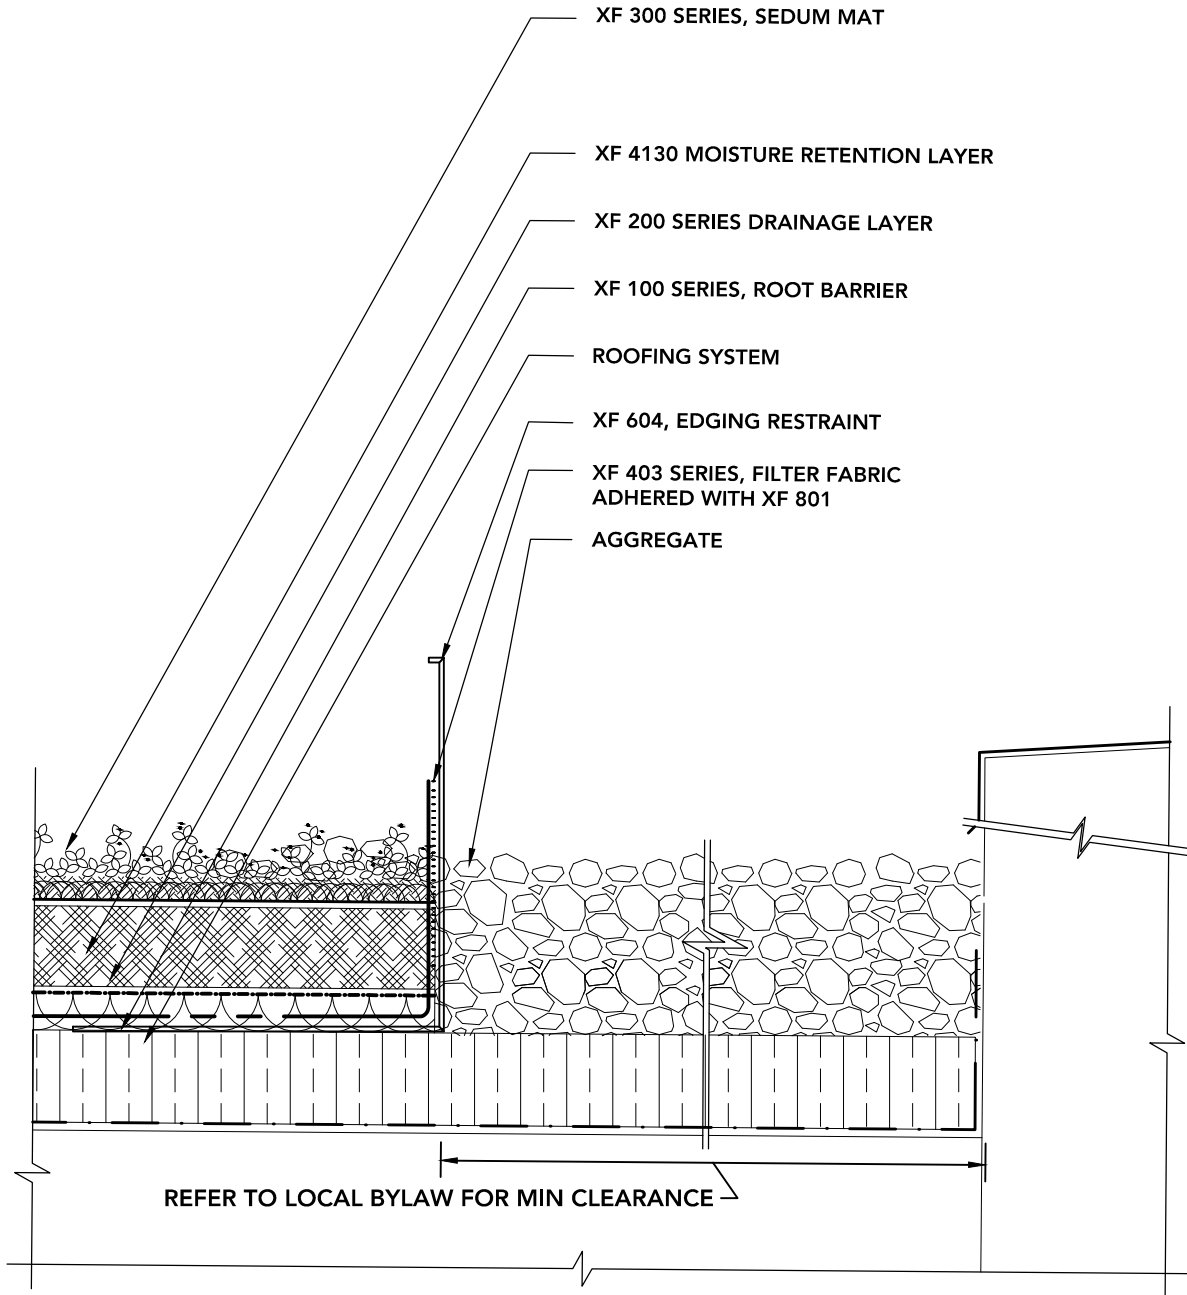

NOTE:

- 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.
- 2- INSTALL INSULATION DIRECTLY ON TOP OF ROOT BARRIER
- 3- ROOF INSULATION NOT TO SCALE



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM


Detail at Roof Parapet



SCALE 1:2

©2020

XF+BR SYSTEM

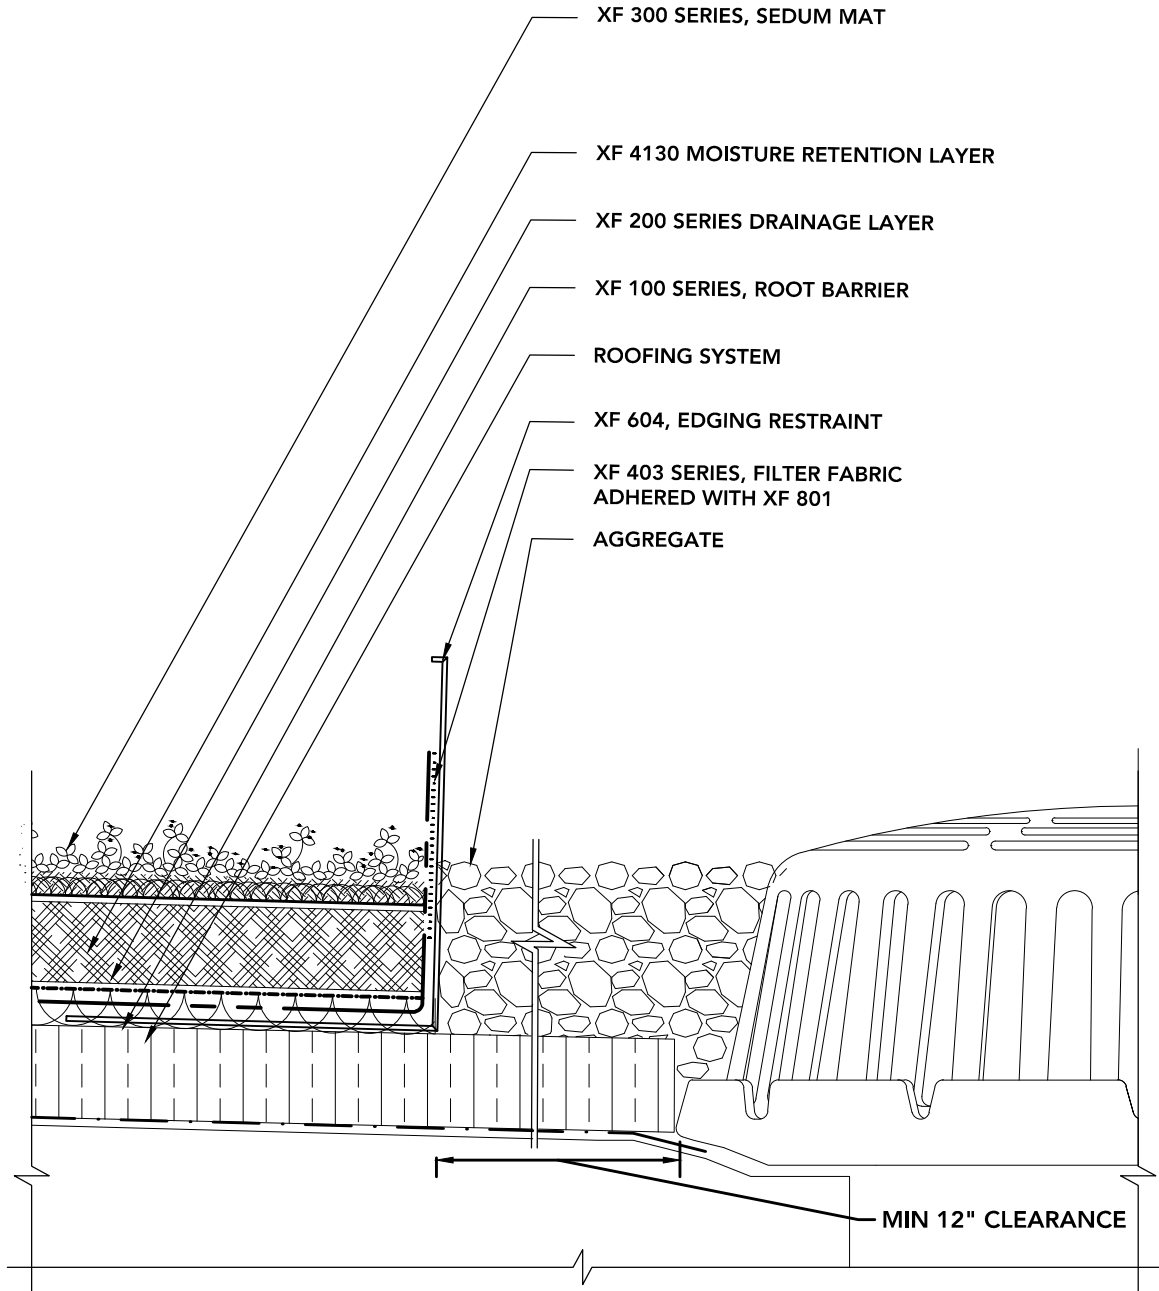

NOTE:

- 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.
- 2- INSTALL INSULATION DIRECTLY ON TOP OF ROOT BARRIER
- 3- ROOF INSULATION NOT TO SCALE



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM


Detail at Roof Drain



SCALE 1:2

©2020

XF+BR SYSTEM

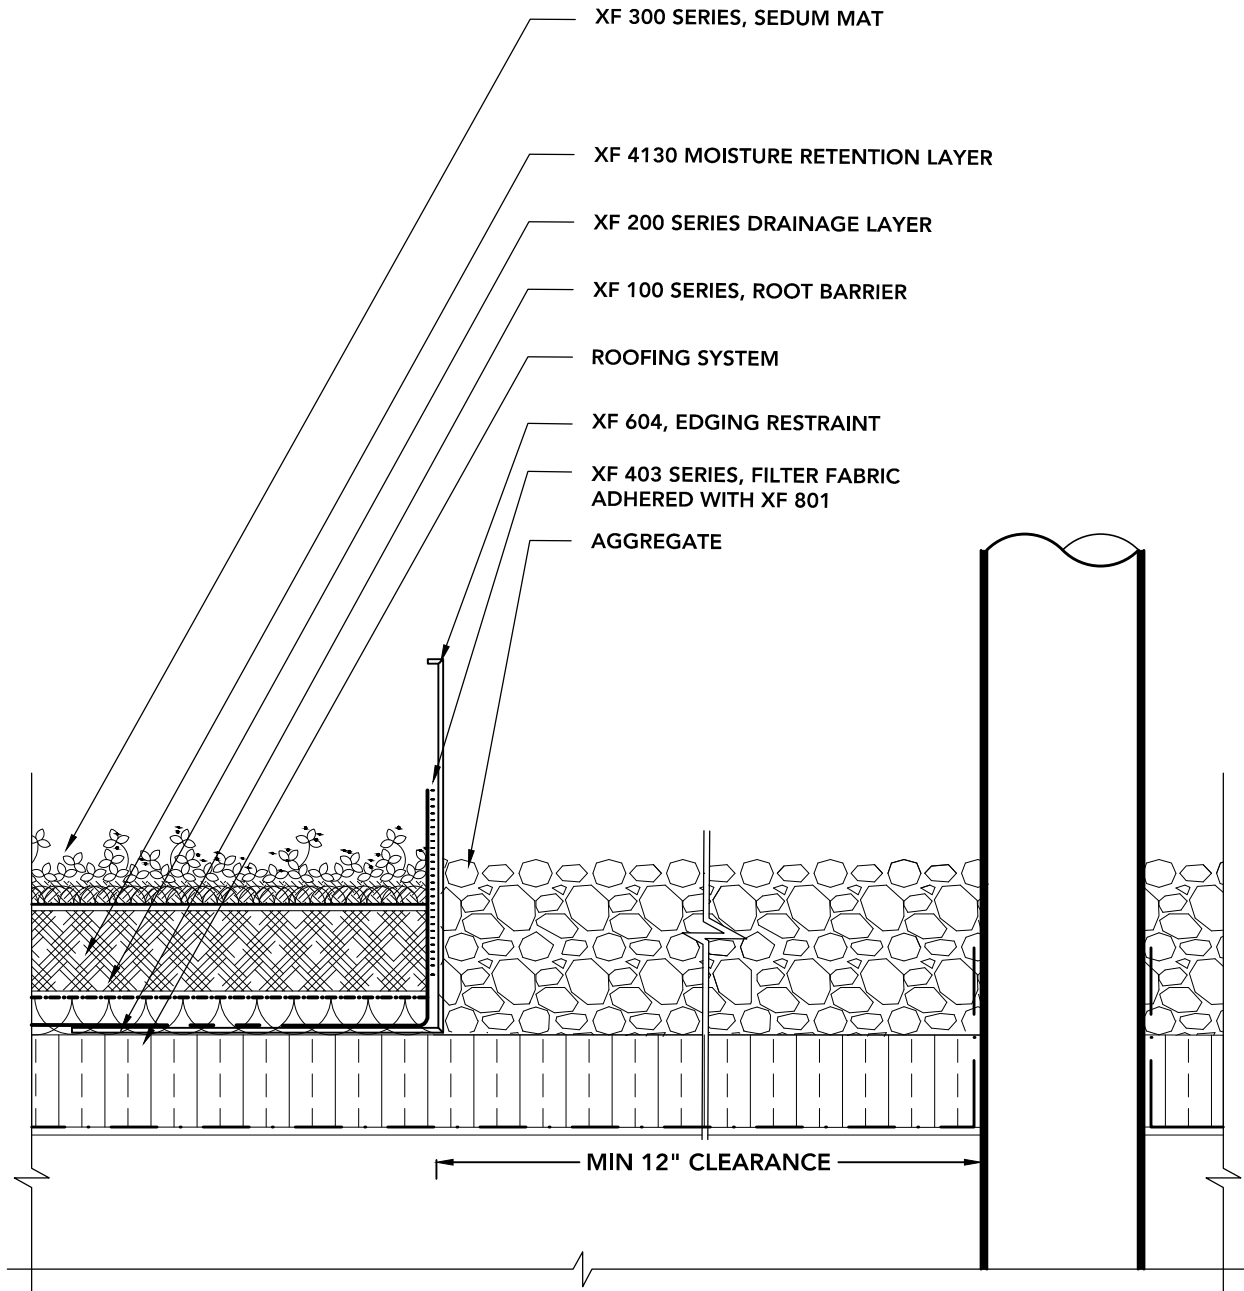

NOTE:


- 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.
- 2- INSTALL INSULATION DIRECTLY ON TOP OF ROOT BARRIER
- 3- ROOF INSULATION NOT TO SCALE



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM


Detail at Roof Penetration



SCALE 1:2

©2020

XF+BR SYSTEM

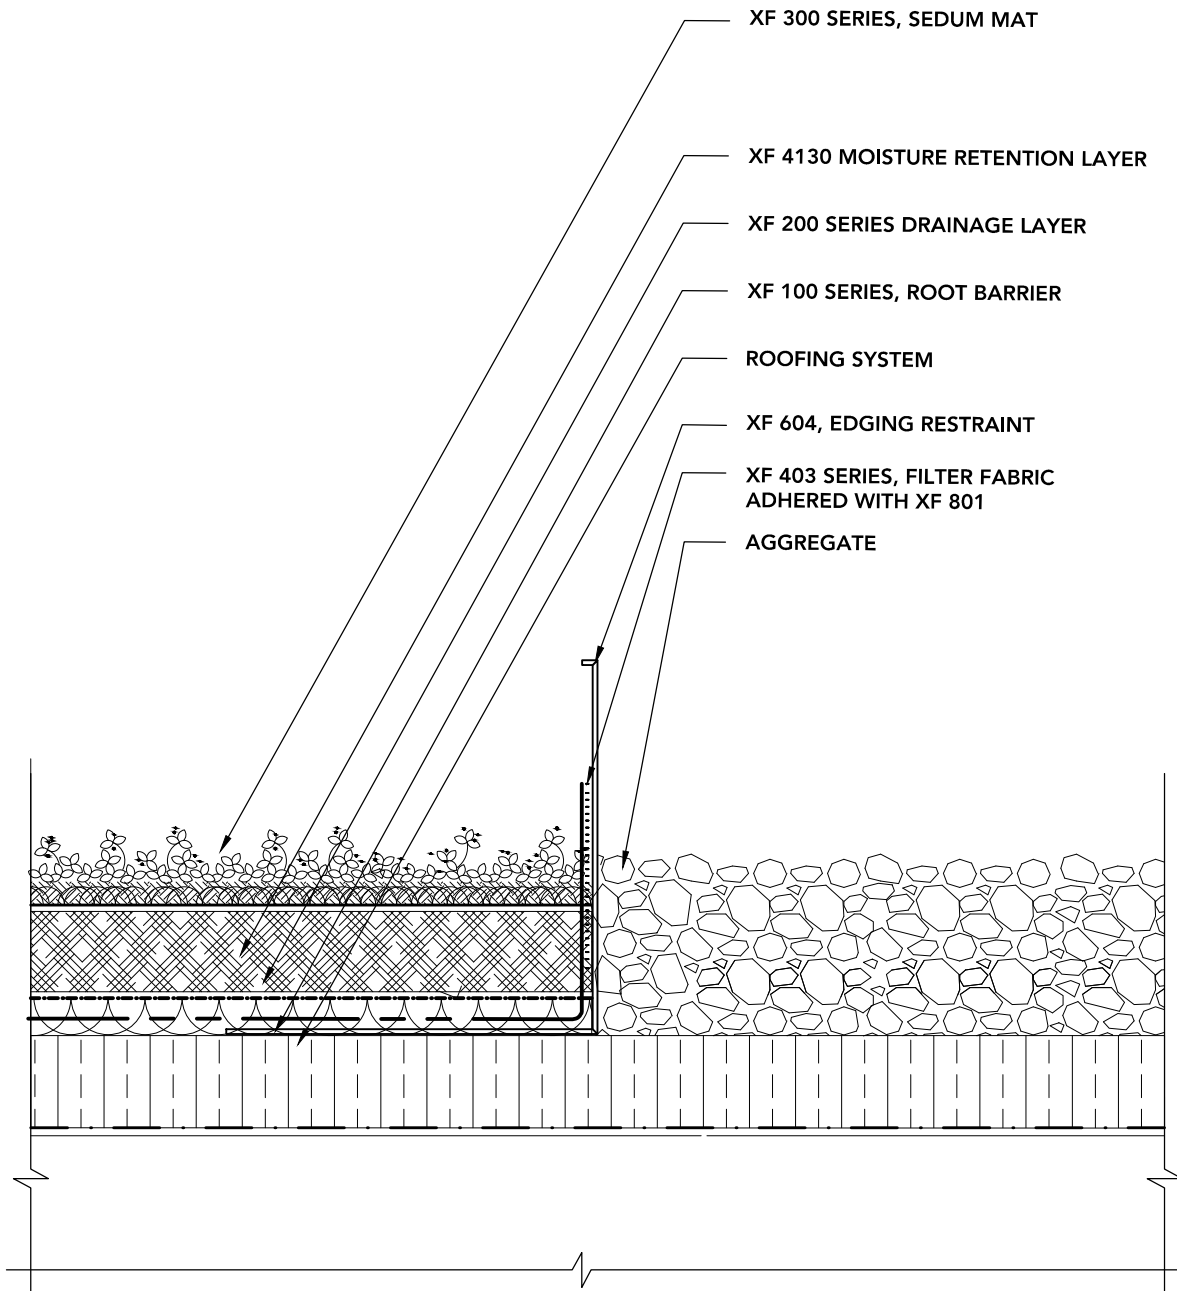

NOTE:

- 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.
- 2- INSTALL INSULATION DIRECTLY ON TOP OF ROOT BARRIER
- 3- ROOF INSULATION NOT TO SCALE



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM


Detail at Vegetation Free Zone



SCALE 1:2

©2020

XF+BR SYSTEM

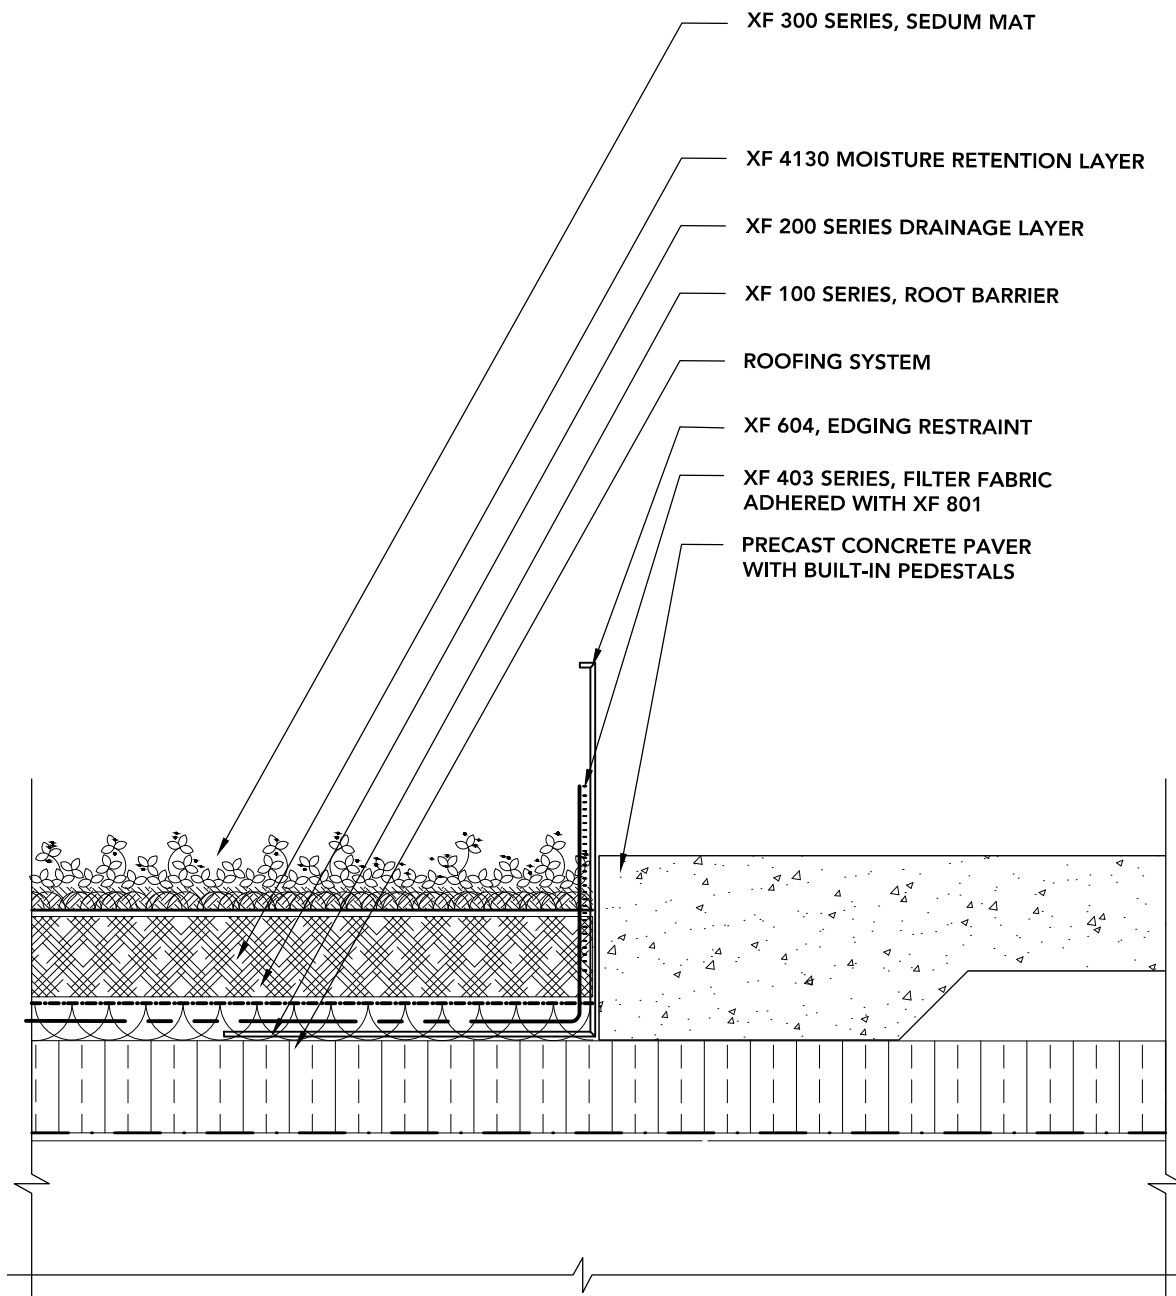

NOTE:


- 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.
- 2- INSTALL INSULATION DIRECTLY ON TOP OF ROOT BARRIER
- 3- ROOF INSULATION NOT TO SCALE



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM

Detail at Vegetation Free Zone



SCALE 1:2

©2020

XF+BR SYSTEM

XF 300 SERIES,
SEDUM MAT


XF 4130
MOISTURE RETENTION LAYER

XF 200 SERIES,
DRAINAGE LAYER

XF 100 SERIES, ROOT BARRIER

ROOFING SYSTEM

AGGREGATE

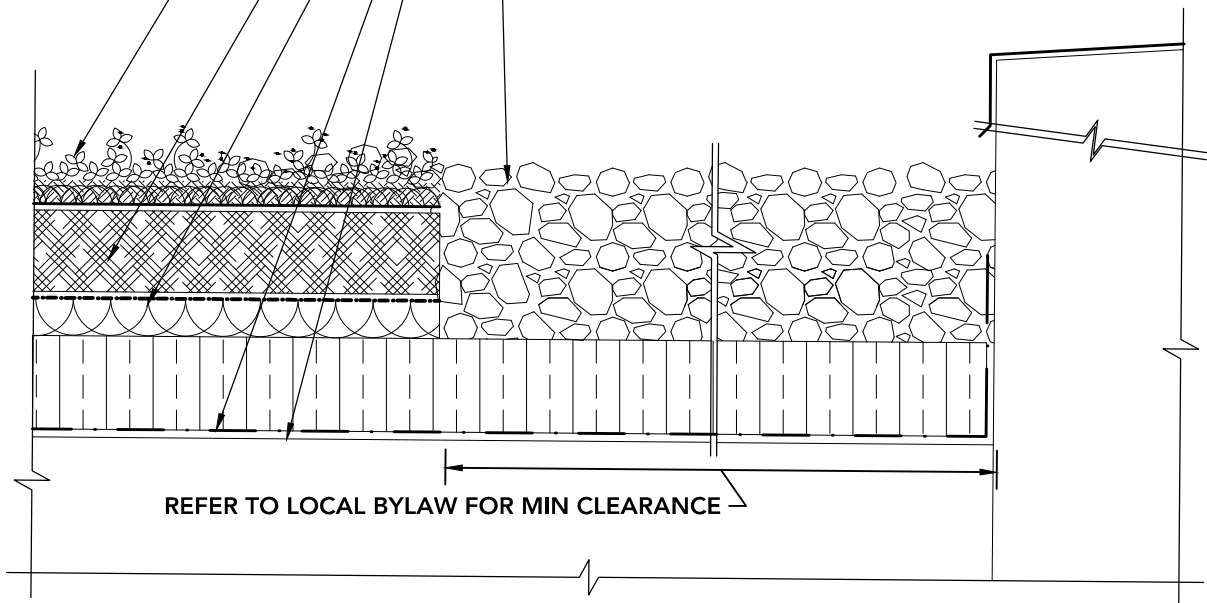

NOTE:

- 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.
- 2- INSTALL INSULATION DIRECTLY ON TOP OF ROOT BARRIER
- 3- ROOF INSULATION NOT TO SCALE



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM

Detail at Roof Parapet



SCALE 1:2

©2020

XF+BR SYSTEM


XF 300 SERIES,
SEDUM MAT

XF 4130
MOISTURE RETENTION LAYER

XF 200 SERIES,
DRAINAGE LAYER

XF 100 SERIES, ROOT BARRIER

ROOFING SYSTEM
AGGREGATE

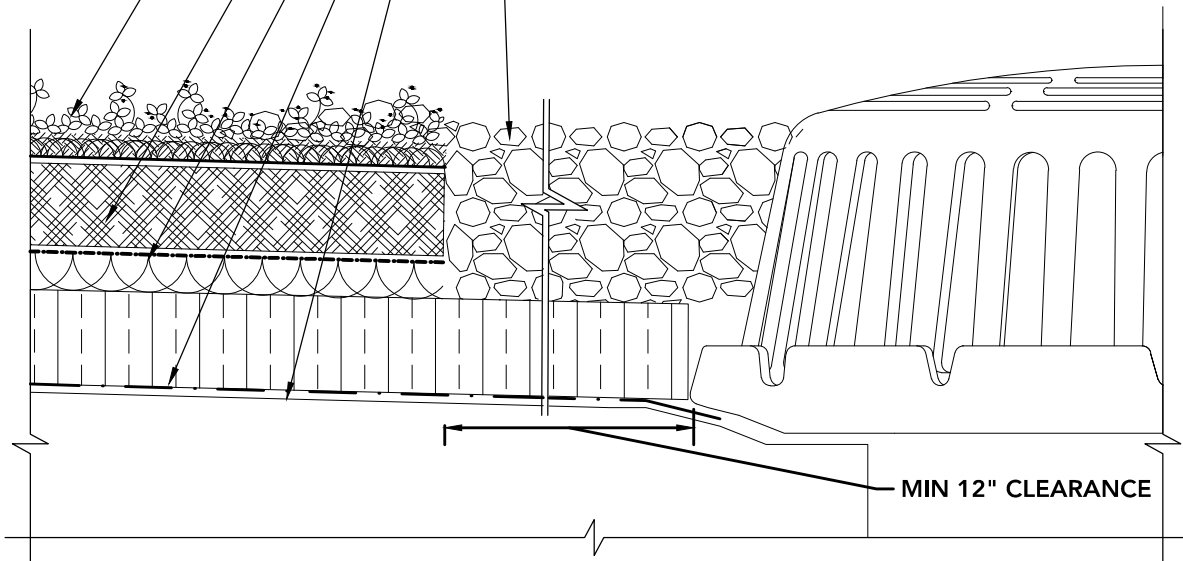

NOTE:

- 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.
- 2- INSTALL INSULATION DIRECTLY ON TOP OF ROOT BARRIER
- 3- ROOF INSULATION NOT TO SCALE



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM

Detail at Roof Drain



SCALE 1:2

©2020

XF+BR SYSTEM


XF 300 SERIES,
SEDUM MAT

XF 4130
MOISTURE RETENTION LAYER

XF 200 SERIES,
DRAINAGE LAYER

XF 100 SERIES, ROOT BARRIER
ROOFING SYSTEM

XF 704,
DRAIN INSPECTION CHAMBER (OPTIONAL)
CENTERED OVER ROOF DRAIN

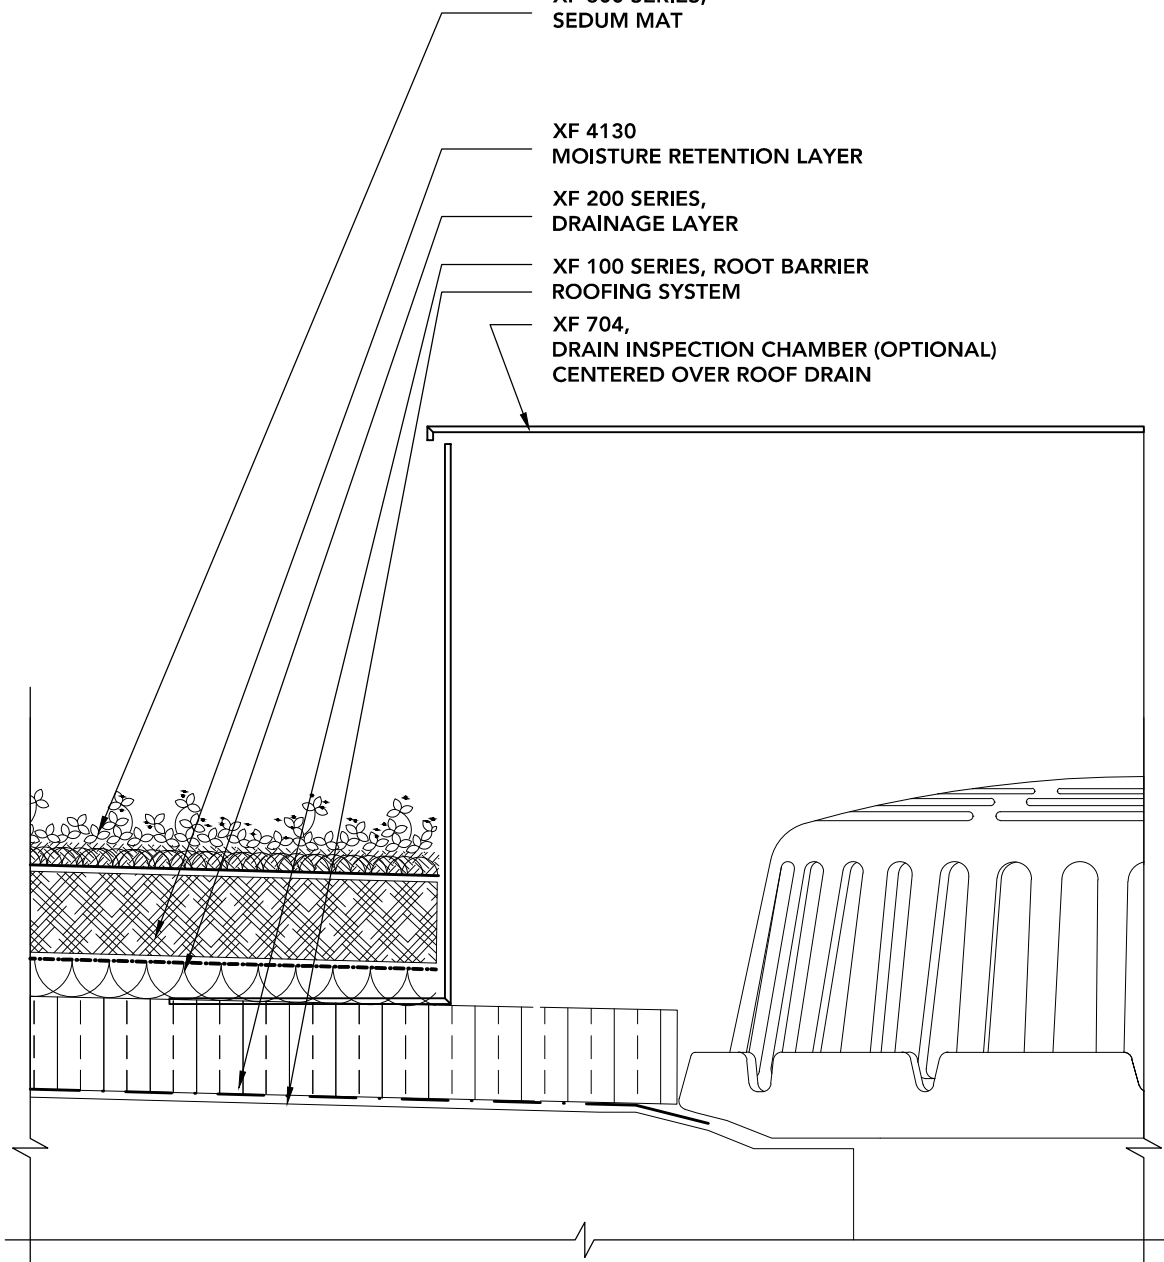

NOTE:

- 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.
- 2- INSTALL INSULATION DIRECTLY ON TOP OF ROOT BARRIER
- 3- ROOF INSULATION NOT TO SCALE

XeroFlor NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM

Detail at Roof Drain



SCALE 1:2

©2020

XF+BR SYSTEM


XF 300 SERIES,
SEDUM MAT

XF 4130
MOISTURE RETENTION LAYER

XF 200 SERIES,
DRAINAGE LAYER

XF 100 SERIES, ROOT BARRIER
ROOFING SYSTEM

AGGREGATE

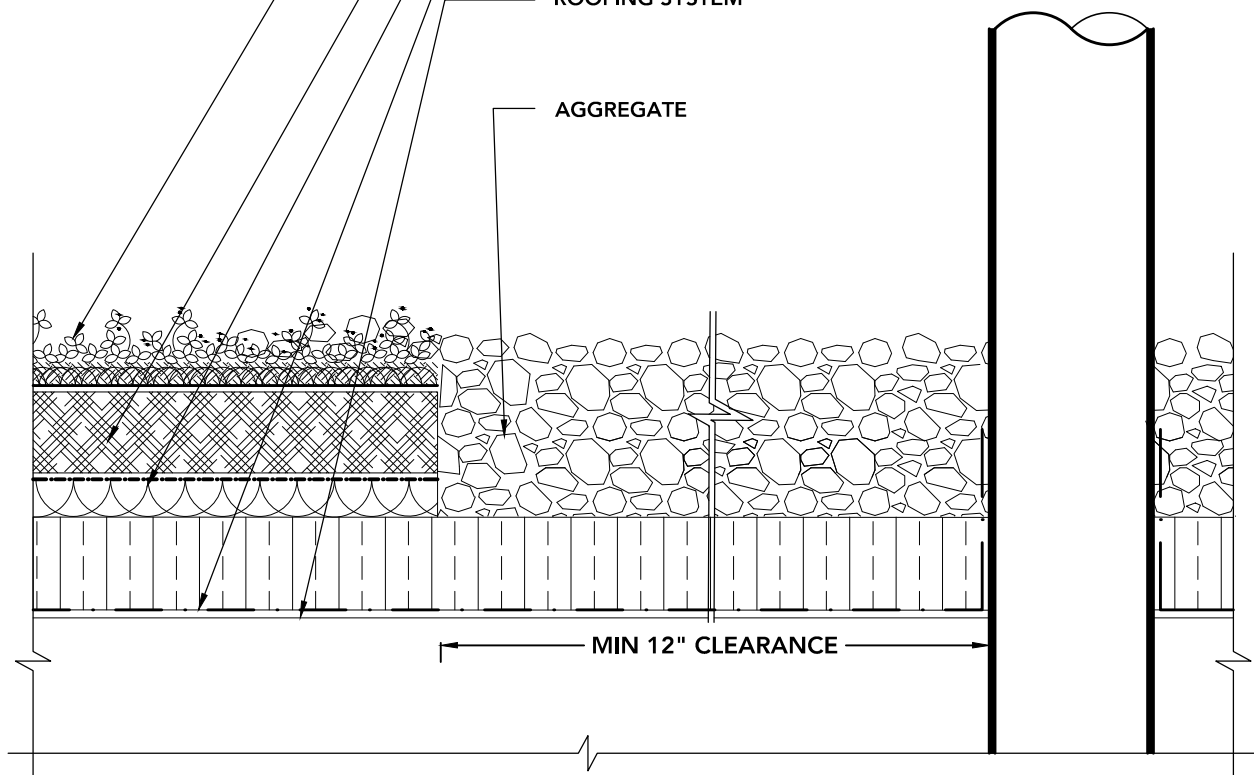

NOTE:


- 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.
- 2- INSTALL INSULATION DIRECTLY ON TOP OF ROOT BARRIER
- 3- ROOF INSULATION NOT TO SCALE



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151


XF+BR SYSTEM

Detail at Roof Penetration



SCALE 1:2

©2020

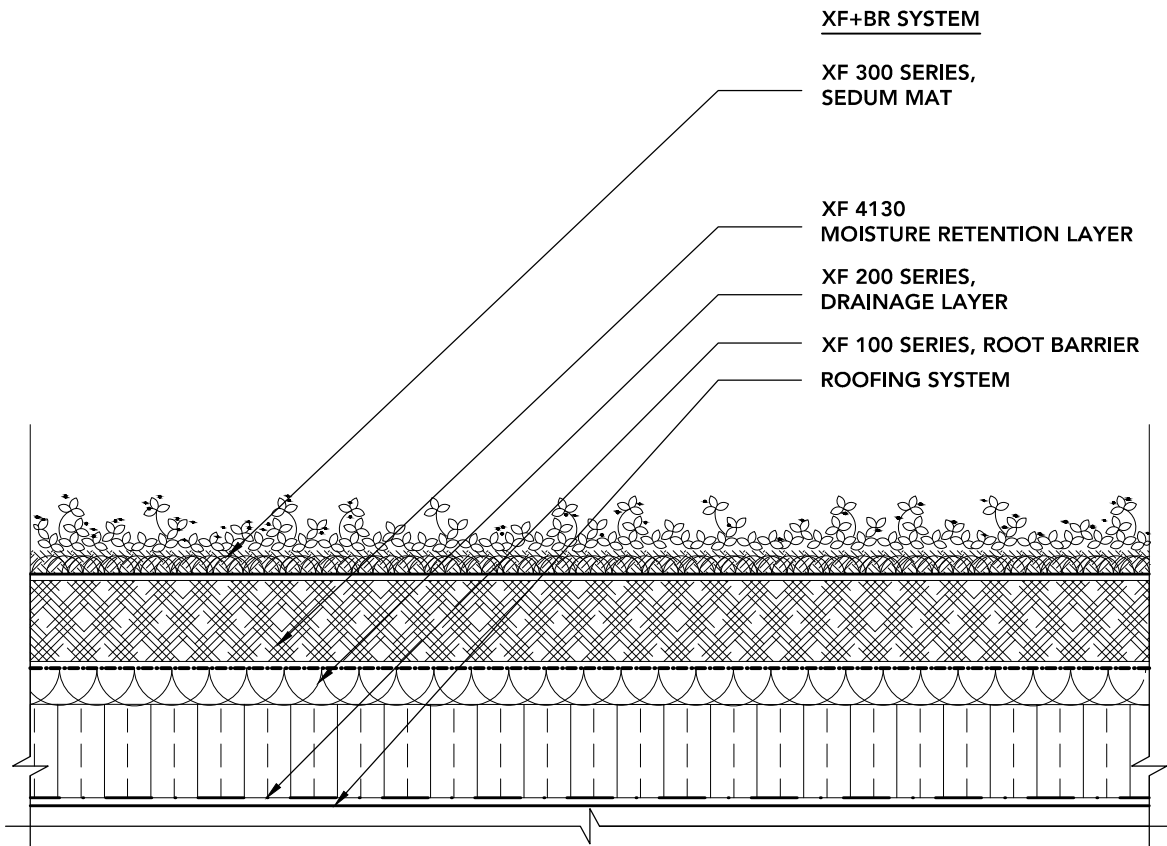

XF+BR SYSTEM

XF 300 SERIES,
SEDUM MAT

XF 4130
MOISTURE RETENTION LAYER

XF 200 SERIES,
DRAINAGE LAYER

XF 100 SERIES, ROOT BARRIER
ROOFING SYSTEM

- NOTE:**
- 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.
 - 2- INSTALL INSULATION DIRECTLY ON TOP OF ROOT BARRIER
 - 3- ROOF INSULATION NOT TO SCALE



XF+BR SYSTEM

XF 300 SERIES,
SEDUM MAT


XF 4130
MOISTURE RETENTION LAYER

XF 200 SERIES,
DRAINAGE LAYER

XF 100 SERIES, ROOT BARRIER

ROOFING SYSTEM

AGGREGATE

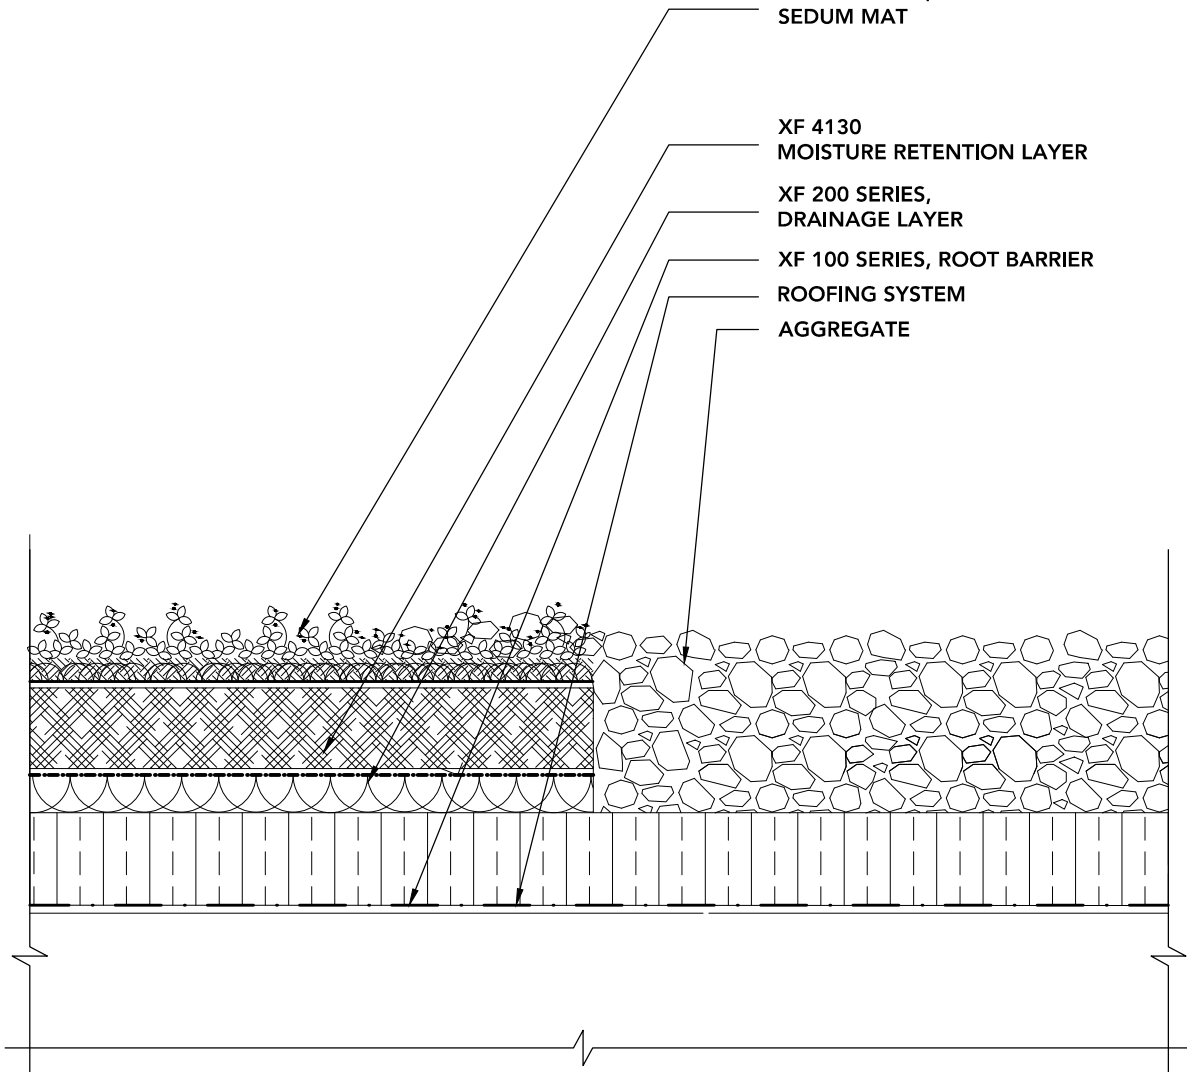

NOTE:


- 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.
- 2- INSTALL INSULATION DIRECTLY ON TOP OF ROOT BARRIER
- 3- ROOF INSULATION NOT TO SCALE



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM

Detail at Vegetation Free Zone



SCALE 1:2

©2020

XF+BR SYSTEM


XF 300 SERIES,
SEDUM MAT

XF 4130
MOISTURE RETENTION LAYER

XF 200 SERIES,
DRAINAGE LAYER

XF 100 SERIES, ROOT BARRIER
ROOFING SYSTEM

PRECAST CONCRETE PAVER
WITH BUILT-IN PEDESTALS

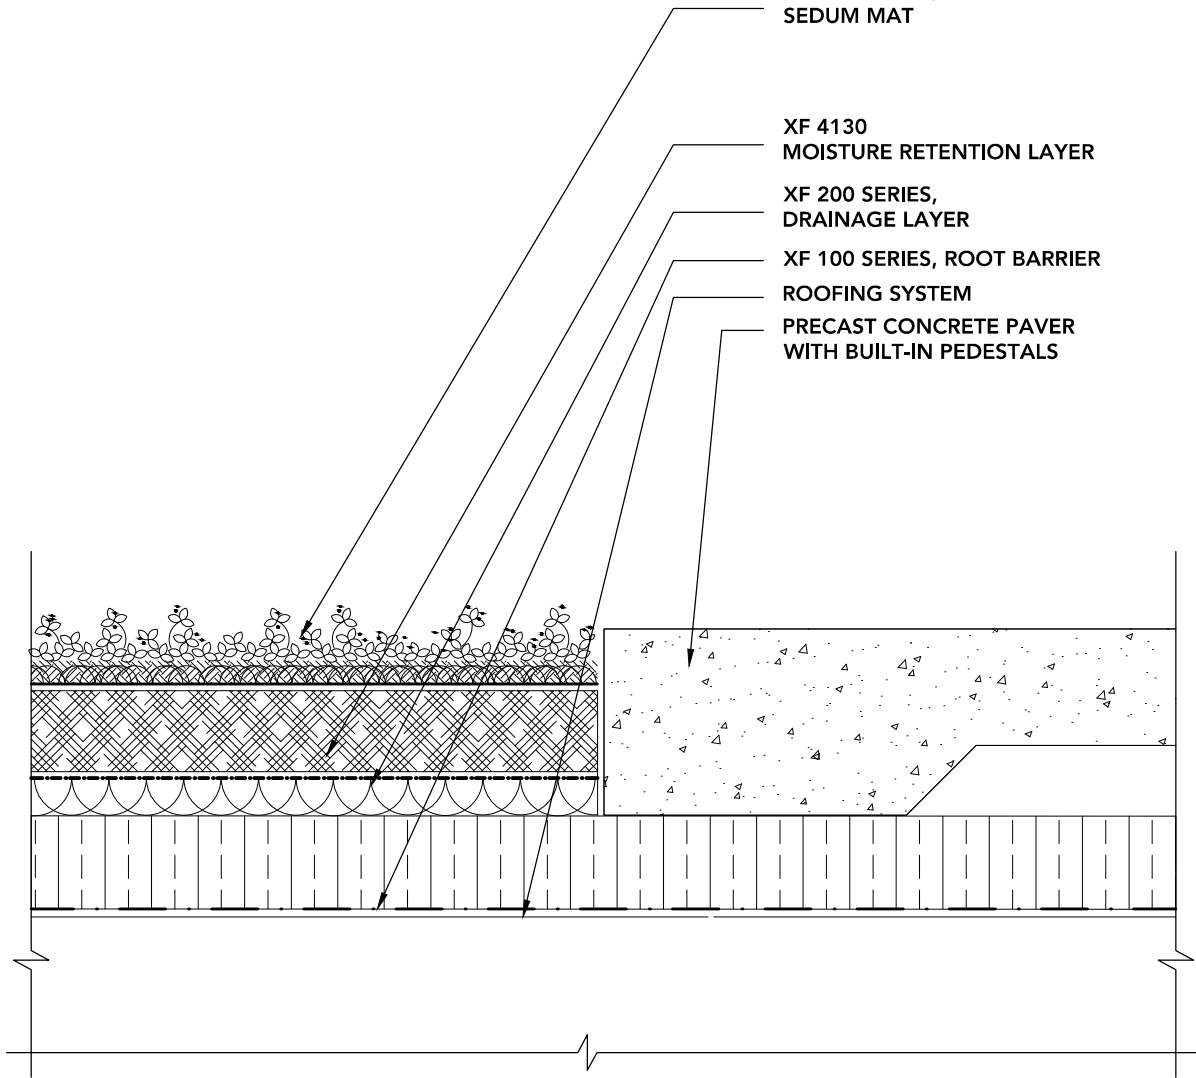

NOTE:

- 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.
- 2- INSTALL INSULATION DIRECTLY ON TOP OF ROOT BARRIER
- 3- ROOF INSULATION NOT TO SCALE

Xeroflor NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM


Detail at Vegetation Free Zone



SCALE 1:2

©2020

XF+BR SYSTEM

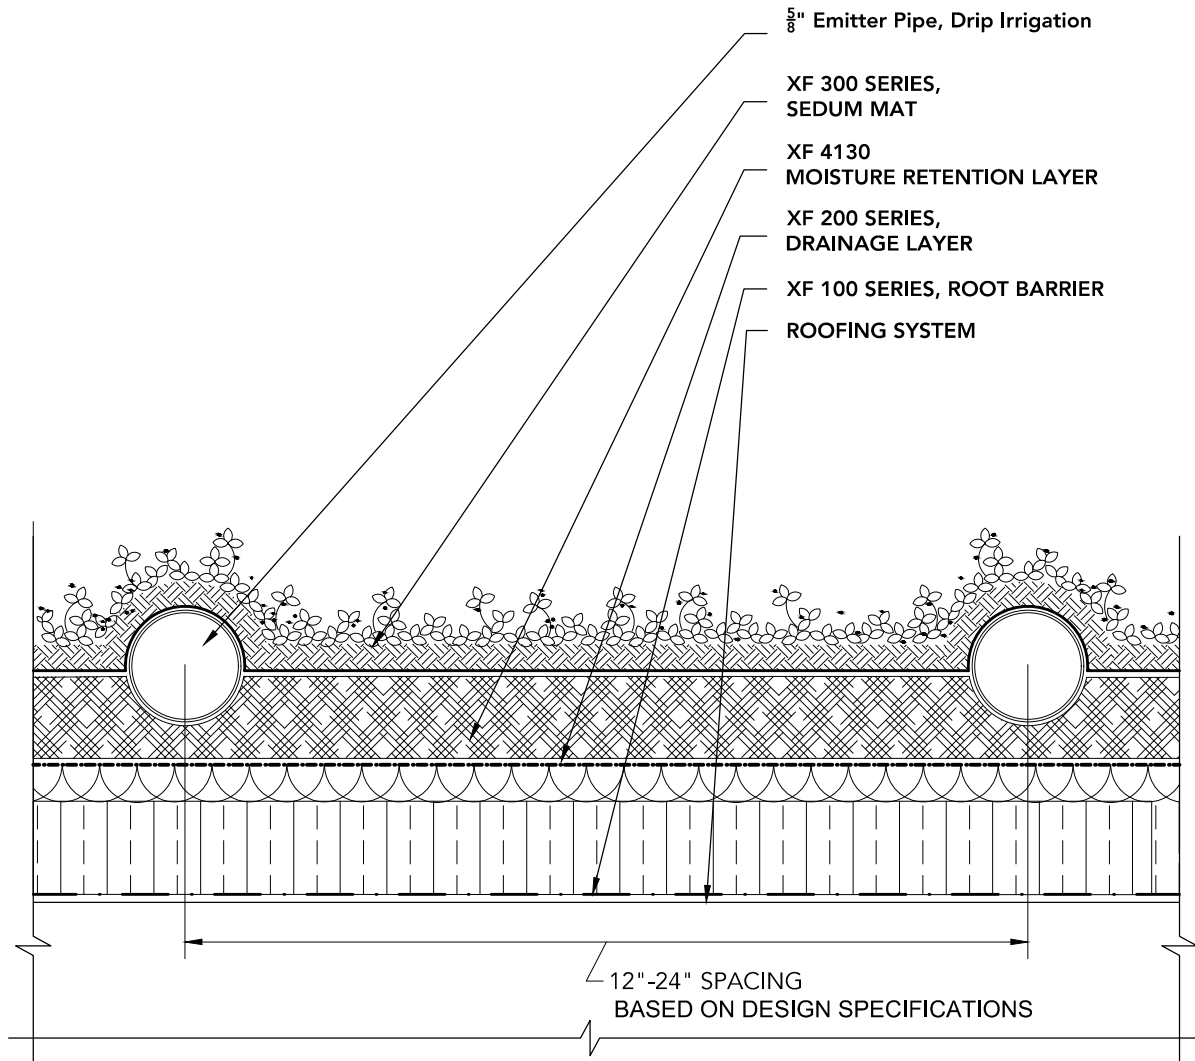

NOTE:


- 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.
- 2- INSTALL INSULATION DIRECTLY ON TOP OF ROOT BARRIER
- 3- ROOF INSULATION NOT TO SCALE



WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+BR SYSTEM

Integrated with Irrigation System



SCALE 1:2

©2020