

**XF+FL SYSTEM**


5/8" Emitter Pipe, Drip Irrigation

XF 300 SERIES,  
SEDUM MAT

XF 400 SERIES,  
MOISTURE RETENTION LAYER

XF 200 SERIES,  
DRAINAGE LAYER

XF 100 SERIES, ROOT BARRIER  
ROOFING SYSTEM

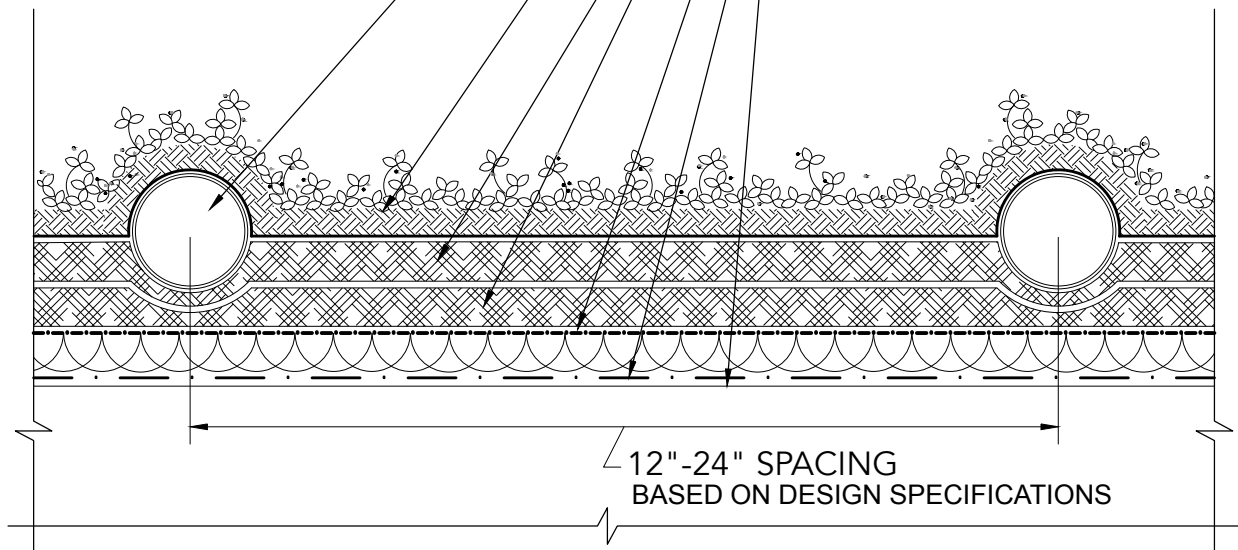


**NOTE:**  
1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

**Xeroflor** NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM  
TOLL FREE: 1-866-335-1151

**XF+FL SYSTEM**

Integrated with Irrigation System



SCALE 1:2

©2020

**XF+FL SYSTEM**

**XF 300 SERIES,  
SEDUM MAT**


**XF 400 SERIES,  
MOISTURE RETENTION LAYER**

**XF 400 SERIES,  
MOISTURE RETENTION LAYER**

**XF 200 SERIES,  
DRAINAGE LAYER**

**XF 100 SERIES, ROOT BARRIER**

**ROOFING SYSTEM  
AGGREGATE**

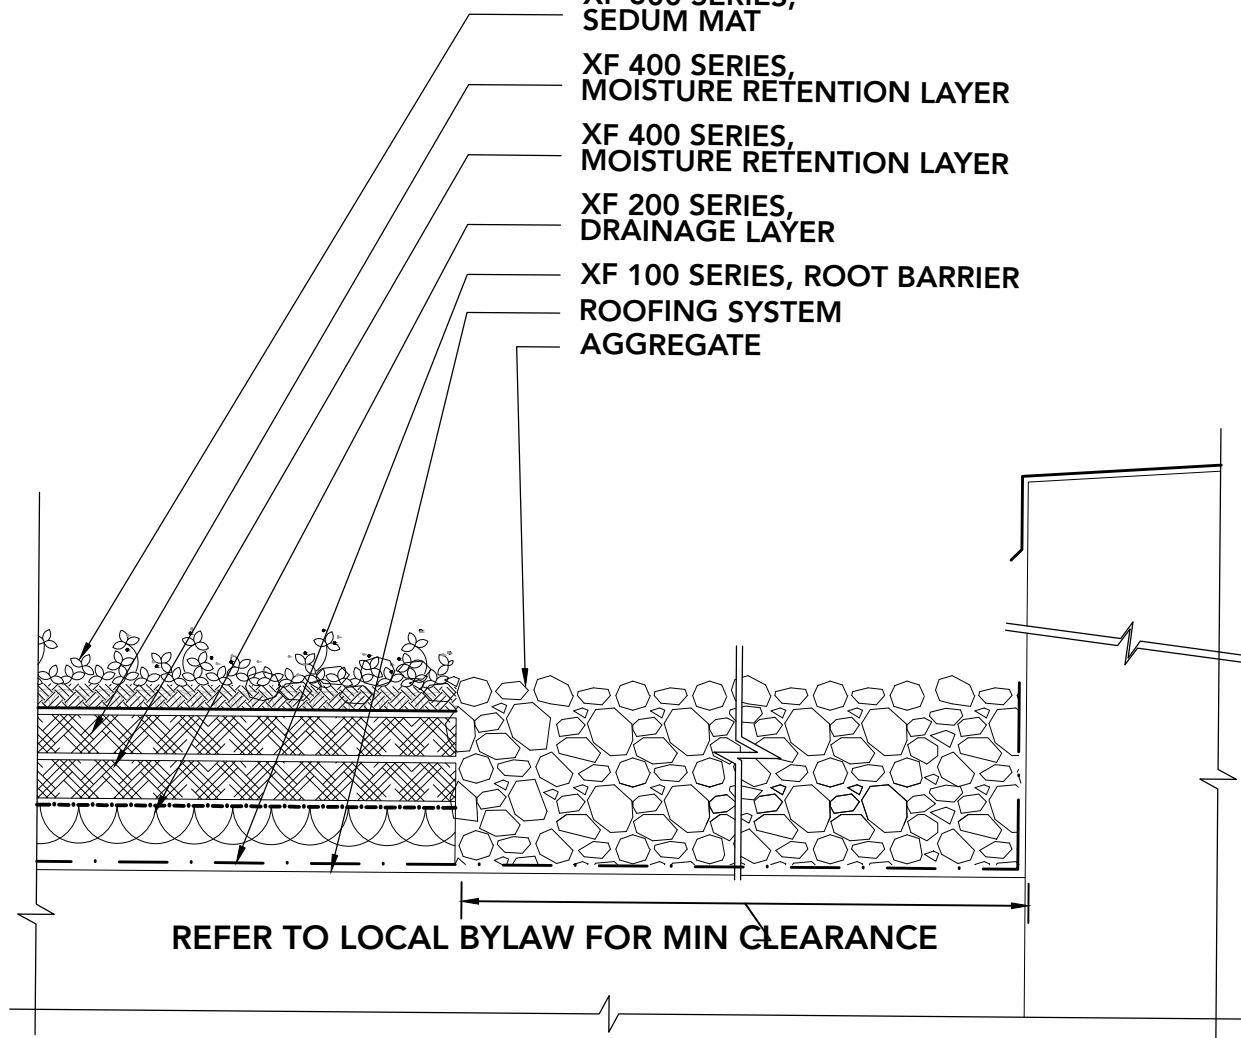

**NOTE:**


**1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.**



WWW.XEROFLORNORTHAMERICA.COM  
TOLL FREE: 1-866-335-1151

**XF+FL SYSTEM**

Detail at Roof Parapet



SCALE 1:2

©2020

**XF+FL SYSTEM**

**XF 300 SERIES,  
SEDUM MAT**

**XF 400 SERIES,  
MOISTURE RETENTION LAYER**


**XF 400 SERIES,  
MOISTURE RETENTION LAYER**

**XF 200 SERIES,  
DRAINAGE LAYER**

**XF 100 SERIES, ROOT BARRIER**

**ROOFING SYSTEM**

**AGGREGATE**

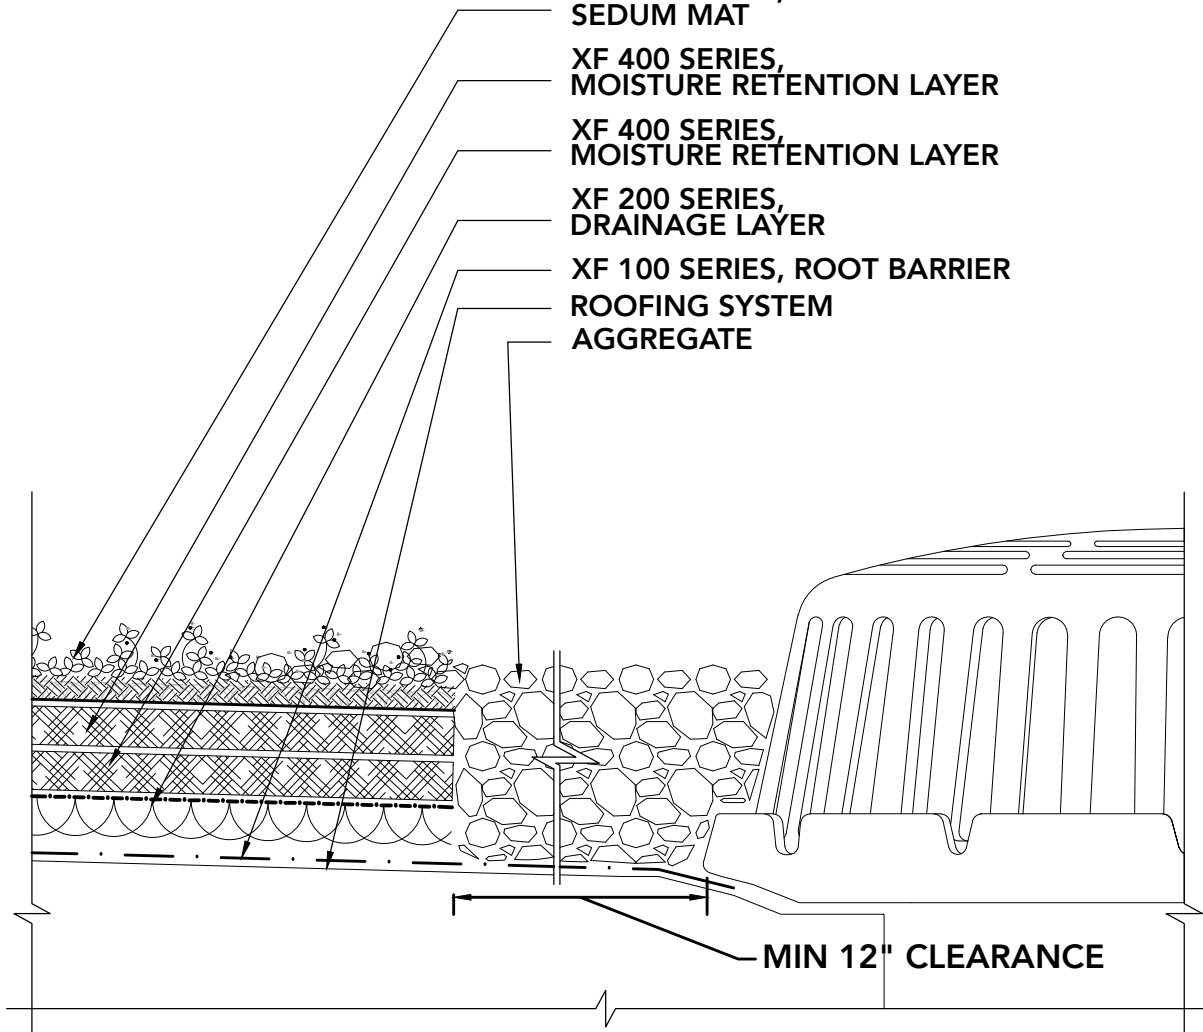

**NOTE:**


**1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.**



WWW.XEROFLORNORTHAMERICA.COM  
TOLL FREE: 1-866-335-1151

**XF+FL SYSTEM**

Detail at Roof Drain



SCALE 1:2

©2020

**XF+FL SYSTEM**

**XF 300 SERIES,  
SEDUM MAT**


**XF 400 SERIES,  
MOISTURE RETENTION LAYER**

**XF 400 SERIES,  
MOISTURE RETENTION LAYER**

**XF 200 SERIES,  
DRAINAGE LAYER**

**XF 100 SERIES, ROOT BARRIER  
ROOFING SYSTEM**

**XF 704,  
DRAIN INSPECTION CHAMBER (OPTIONAL)  
CENTERED OVER ROOF DRAIN**

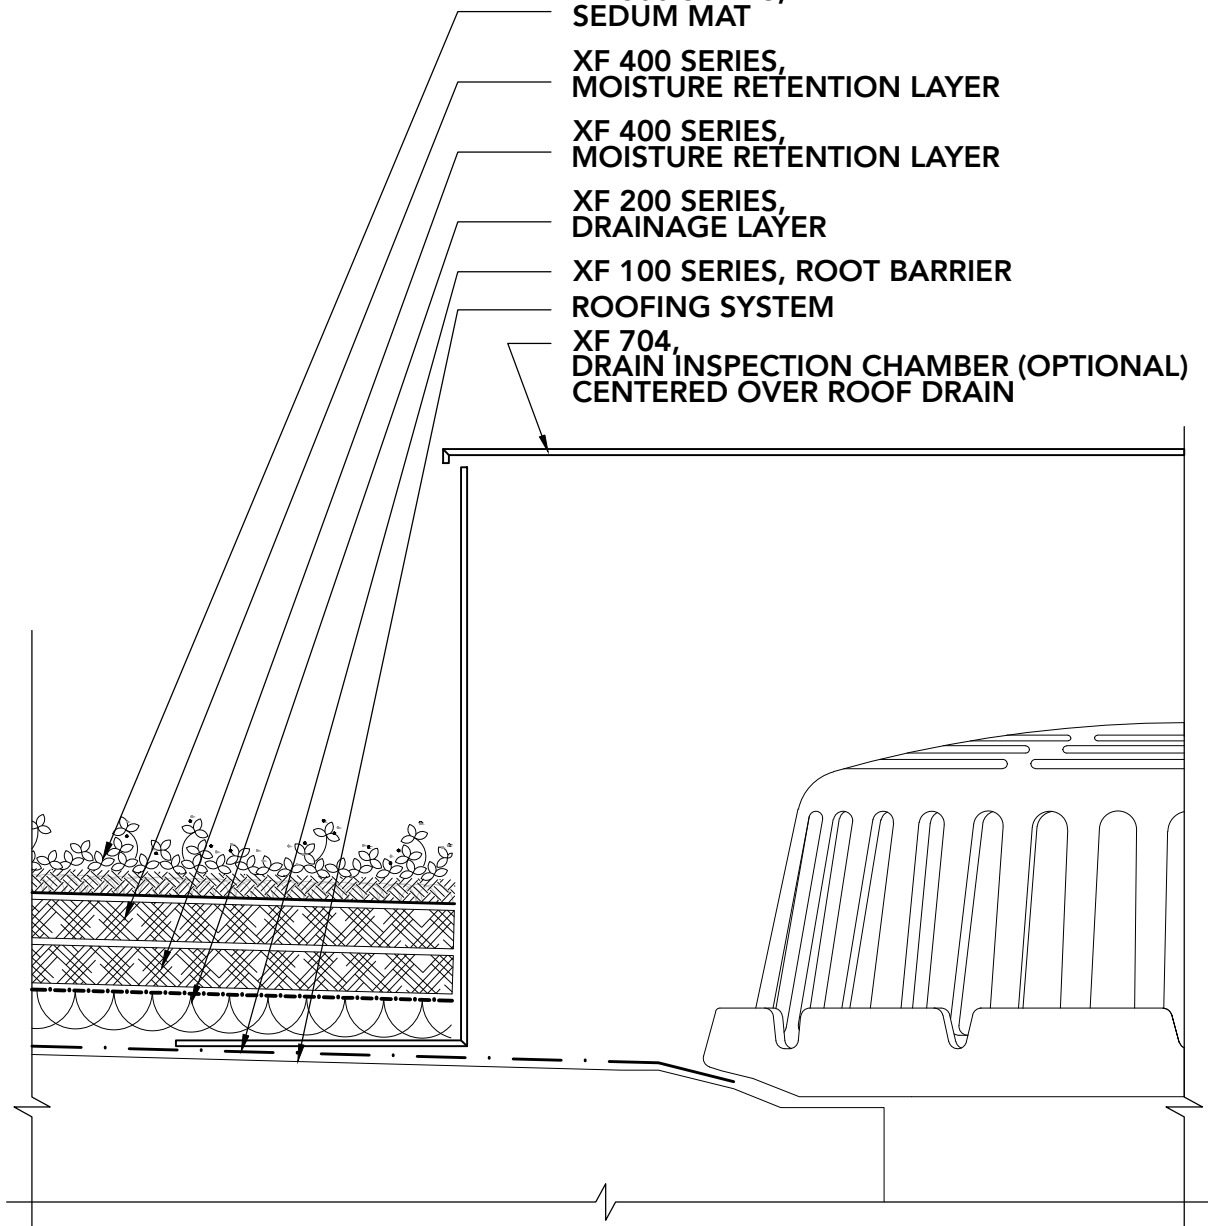

**NOTE:**


**1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.**

**Xeroflor** NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM  
TOLL FREE: 1-866-335-1151

**XF+FL SYSTEM**

Detail at Roof Drain



SCALE 1:2

©2020

**XF+FL SYSTEM**

XF 300 SERIES,  
SEDUM MAT


XF 400 SERIES,  
MOISTURE RETENTION LAYER

XF 400 SERIES,  
MOISTURE RETENTION LAYER

XF 200 SERIES,  
DRAINAGE LAYER

XF 100 SERIES, ROOT BARRIER  
ROOFING SYSTEM

AGGREGATE

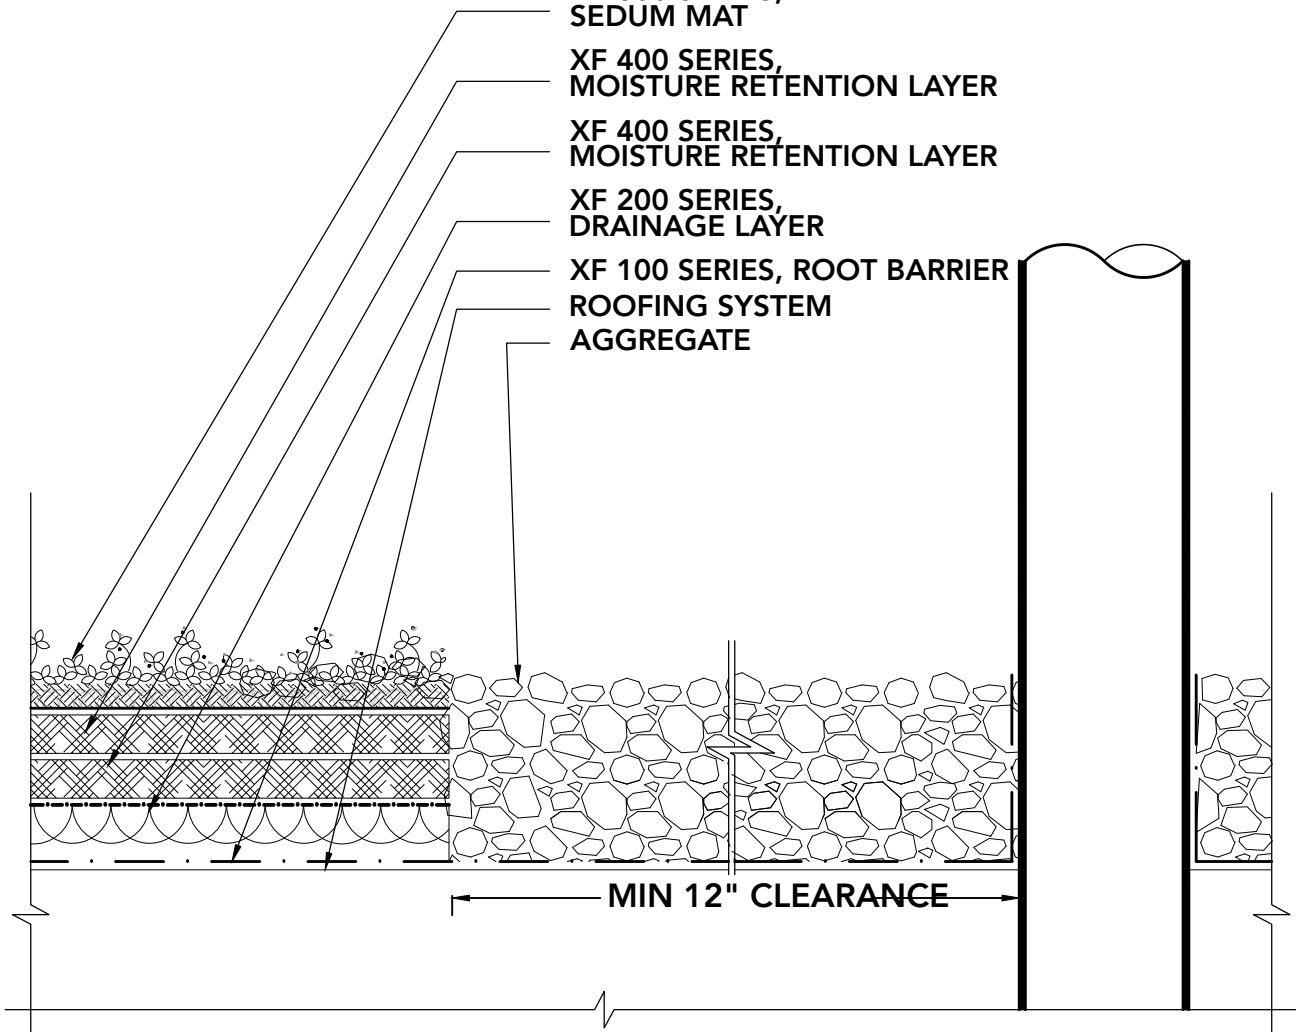

**NOTE:**

1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

**Xeroflor** NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM  
TOLL FREE: 1-866-335-1151


**XF+FL SYSTEM**

Detail at Roof Penetration



SCALE 1:2

©2020

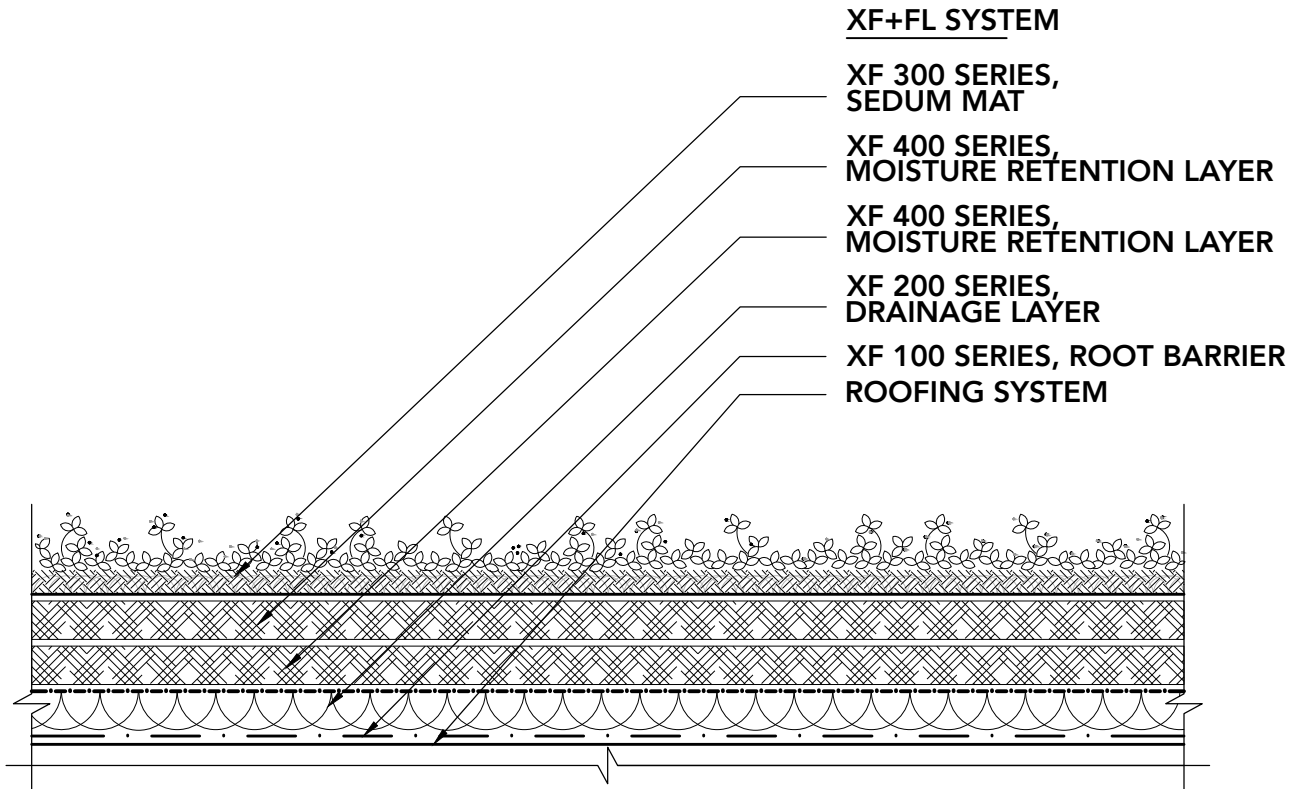


**NOTE:**  
 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.



WWW.XEROFLORNORTHAMERICA.COM  
 TOLL FREE: 1-866-335-1151

**XF+FL SYSTEM**

Standard Layers



SCALE 1:2

©2020

**XF+FL SYSTEM**

**XF 300 SERIES,  
SEDUM MAT**


**XF 400 SERIES,  
MOISTURE RETENTION LAYER**

**XF 400 SERIES,  
MOISTURE RETENTION LAYER**

**XF 200 SERIES,  
DRAINAGE LAYER**

**XF 100 SERIES, ROOT BARRIER**

**ROOFING SYSTEM  
AGGREGATE**

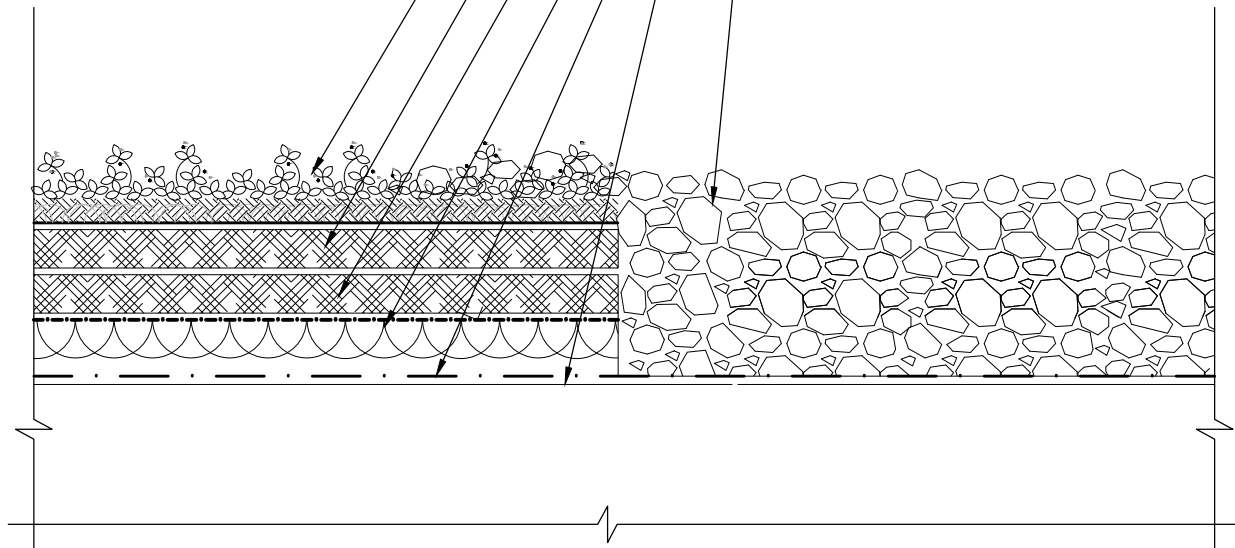


**NOTE:**  
1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.



WWW.XEROFLORNORTHAMERICA.COM  
TOLL FREE: 1-866-335-1151


**XF+FL SYSTEM**

Detail at Vegetation Free Zone



SCALE 1:2

©2020

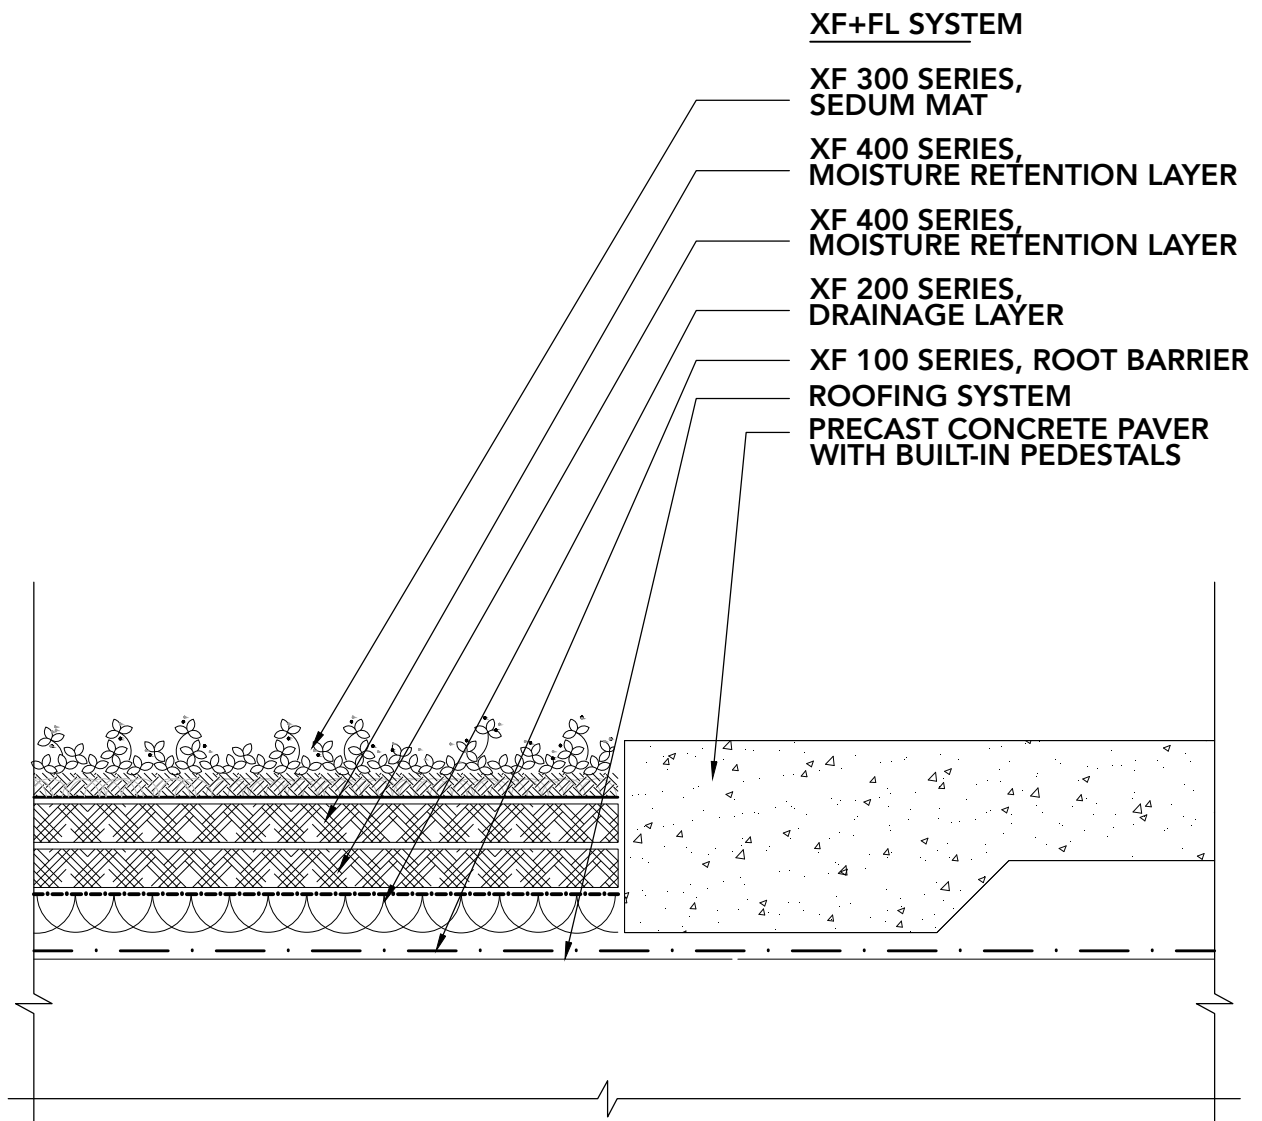


**NOTE:**  
 1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

**Xeroflor** NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM  
 TOLL FREE: 1-866-335-1151

**XF+FL SYSTEM**

Detail at Vegetation Free Zone



SCALE 1:2

©2020