

XF+FL SYSTEM

**XF 300 SERIES,
SEDUM MAT**


**XF 400 SERIES,
MOISTURE RETENTION LAYER**

**XF 400 SERIES,
MOISTURE RETENTION LAYER**

**XF 200 SERIES,
DRAINAGE LAYER**

XF 100 SERIES, ROOT BARRIER

**ROOFING SYSTEM
AGGREGATE**

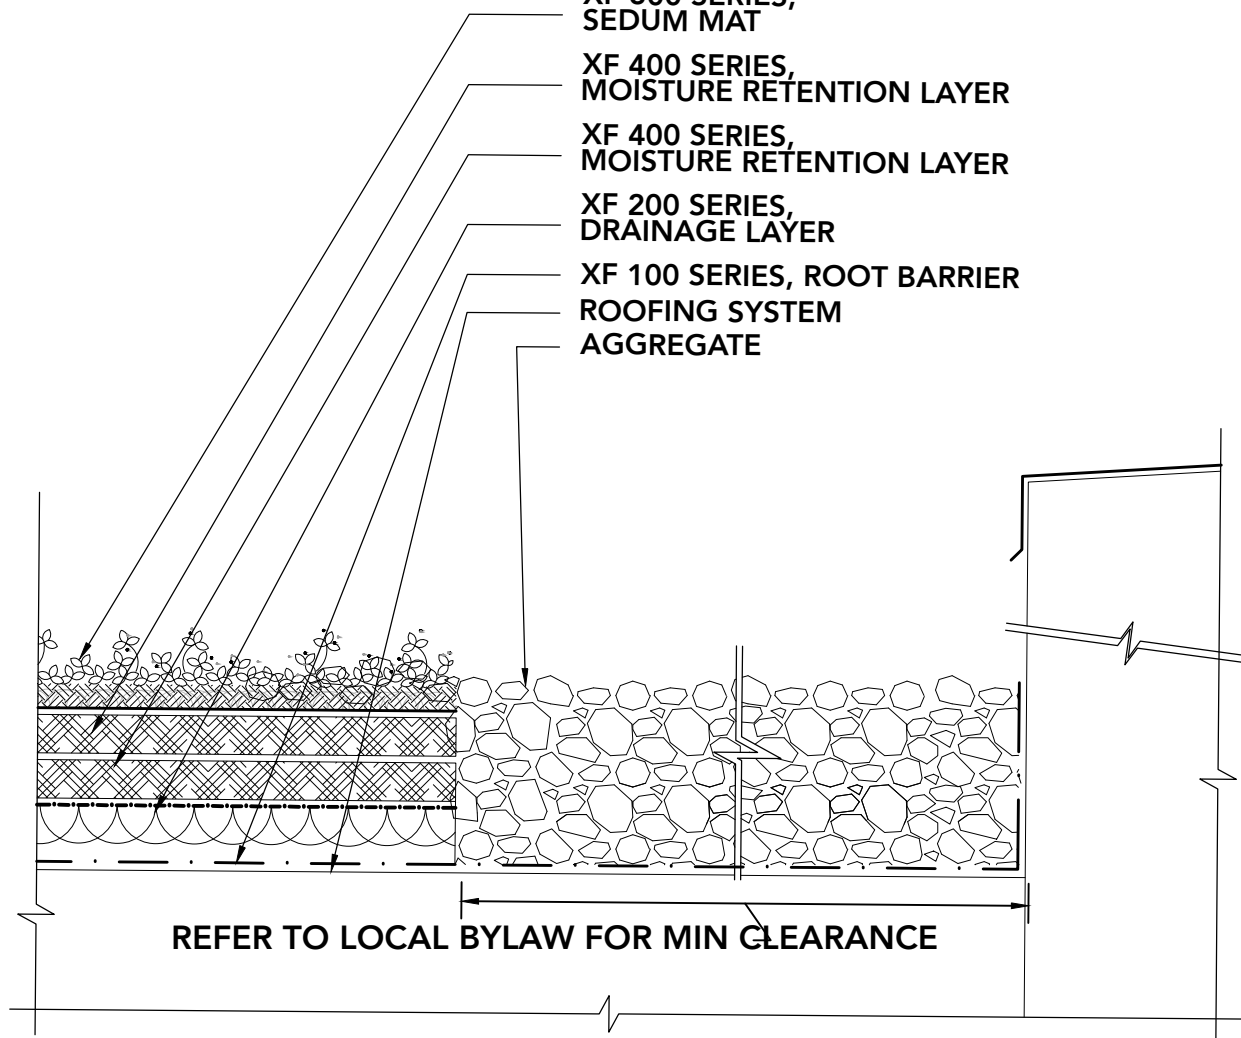

NOTE:
1- INSTALL THE ROOT BARRIER DIRECTLY ON TOP OF WATERPROOFING MEMBRANE.

Xeroflor NORTH AMERICA

WWW.XEROFLORNORTHAMERICA.COM
TOLL FREE: 1-866-335-1151

XF+FL SYSTEM

Detail at Roof Parapet



SCALE 1:2

©2020